
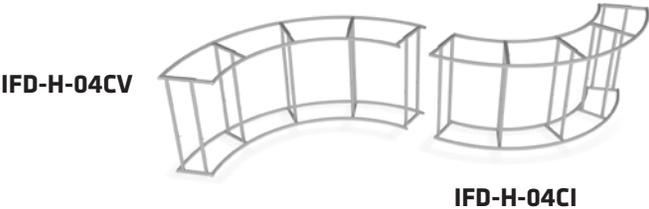
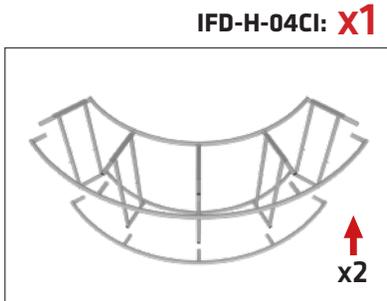
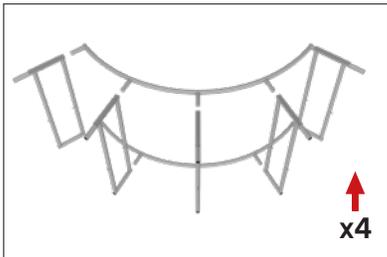
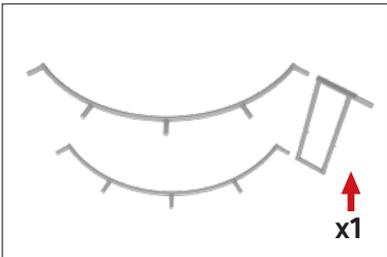
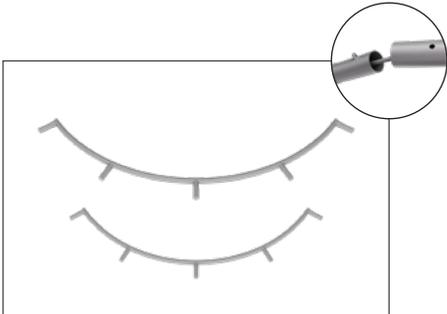
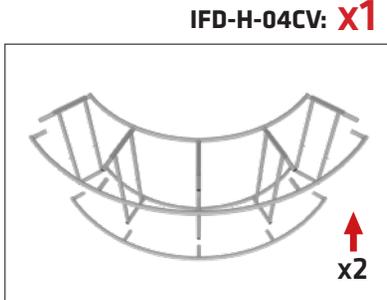
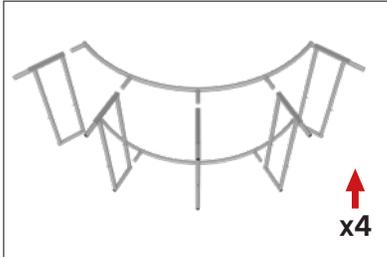
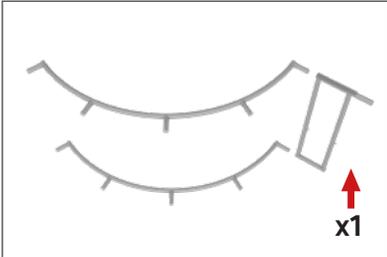


Set Up Instructions

IFD-H-08S

FRAME ASSEMBLY:
Assemble base parts and poles by pressing and pushing together.



***NOT ALL PARTS WILL BE USED:**
This counter is made from x3 full kits and not all parts will be needed to complete this design.

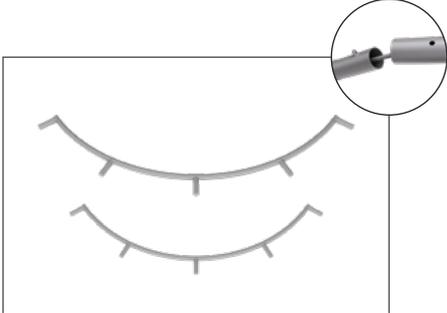


Set Up Instructions

IFD-H-08S


IFD-H-04CV:
Assemble end cap on left side only.
Use hand tool when shown.

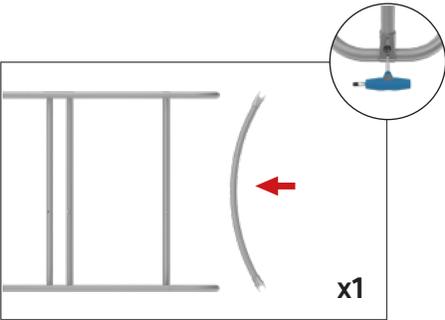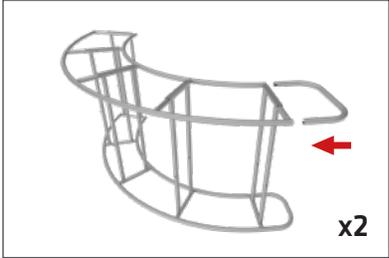



CROSSBAR SUPPORT:
Attach across second opening from the right.

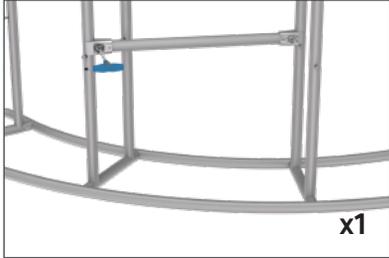


COUNTER TOP SUPPORT:
For leveling end cap counter top.

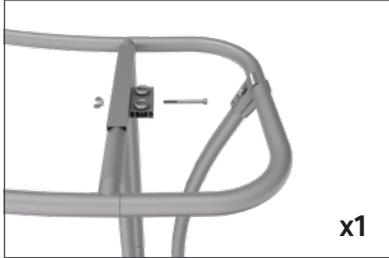


IFD-H-04CI:
Assemble end cap on right side only.
Use hand tool when shown.

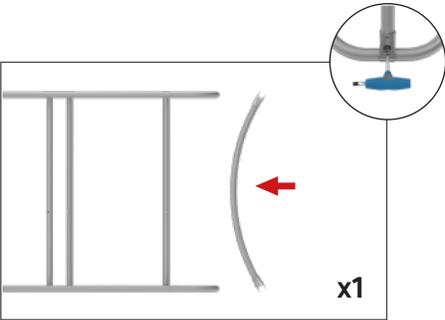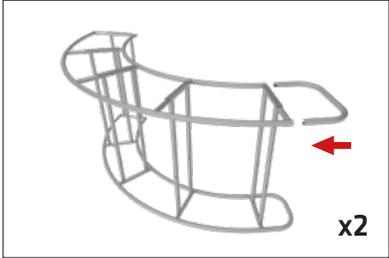

CROSSBAR SUPPORT:
Attach across second opening from the right.

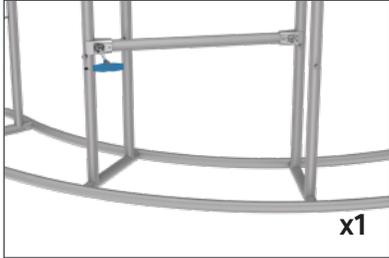


COUNTER TOP SUPPORT:
For leveling end cap counter top.

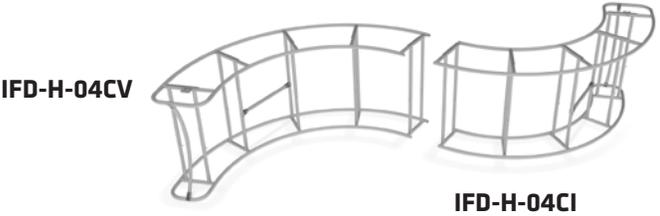


Set Up Instructions

IFD-H-08S

CONNECT FRAMES TOGETHER:
Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

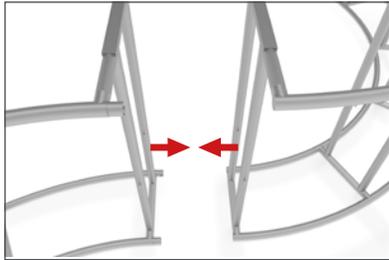


frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

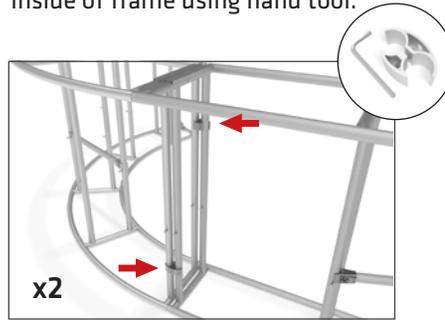


WLM-P-SCS


SHELVES:
(OPTIONAL) To add shelves to frame, position and level shelf on

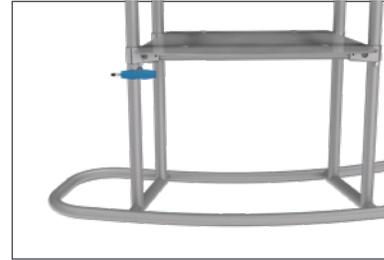


frame before tightening clamps down with hex tool.

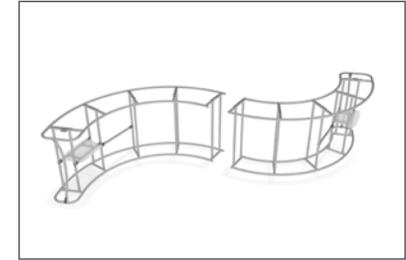


GRAPHIC INSTALL:
Step 1: Unzip print and slide print onto frame like a pillow case.

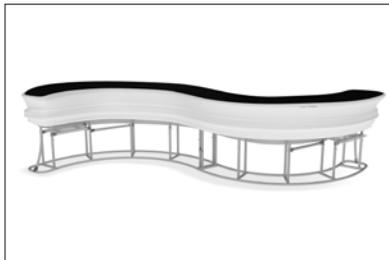

Step 2: Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

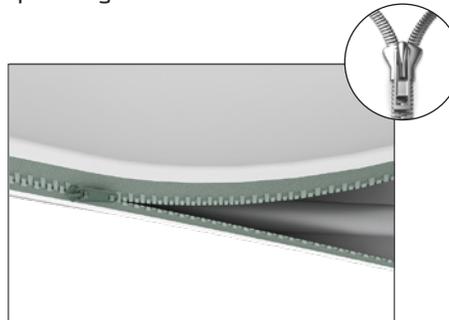

Step 3: Attach countertop panels to fabric counter with Velcro. Start at one end and work your way across to the other side.

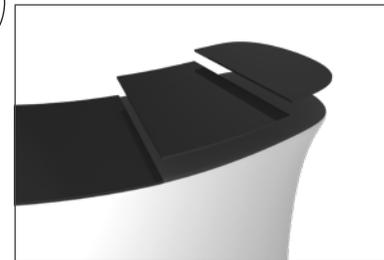

Step 4: Join counter top panels together front and back with black push-on clamps.

