



# Set Up Instructions









# IFD-H-12J

## FRAME ASSEMBLY:

Assemble base parts and poles by pressing and pushing together.


## \*NOT ALL PARTS WILL BE USED:

This counter is made from x3 full kits and not all parts will be needed to complete this design.

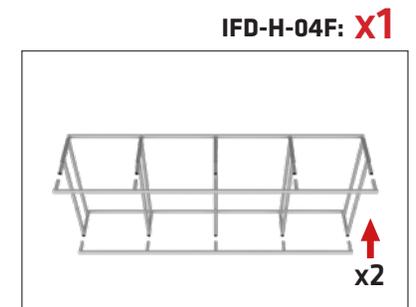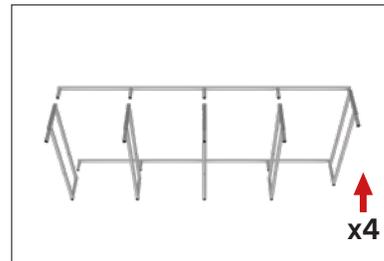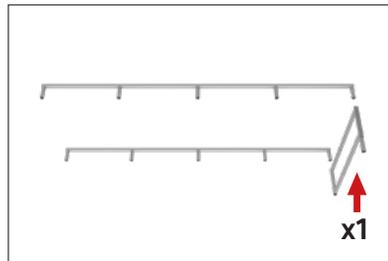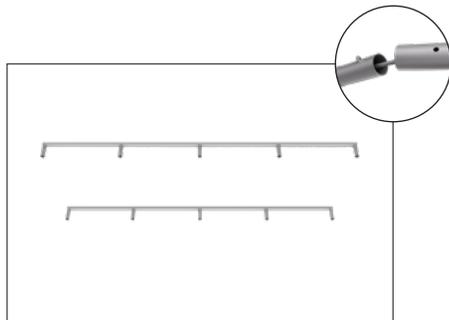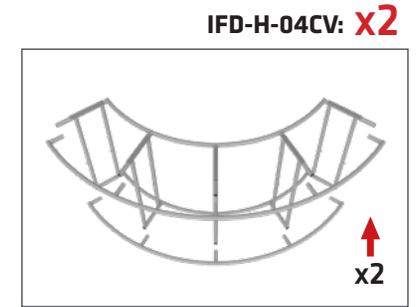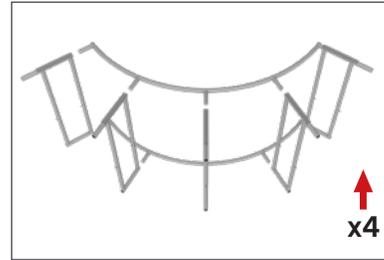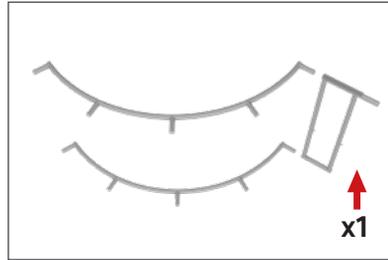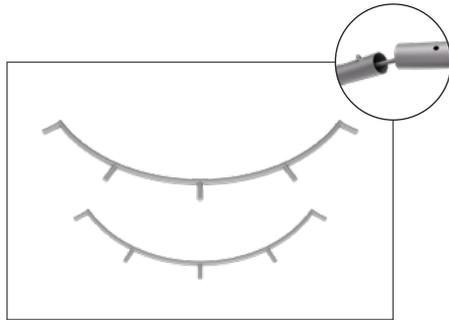

IFD-H-04CV Back

IFD-H-04CV Front

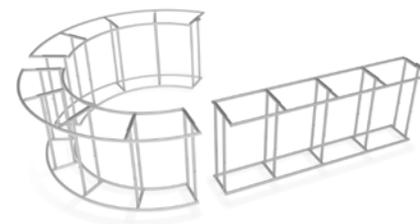



IFD-H-04F

# Set Up Instructions

# IFD-H-12J


## IFD-H-04CV Back:

Assemble end cap on left side only.  
Use hand tool when shown.

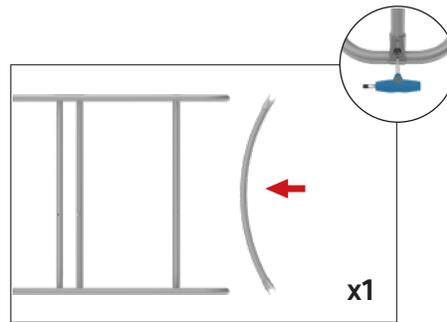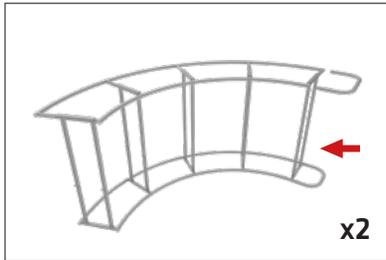

## CROSSBAR SUPPORT:

Attach across second opening from the left.

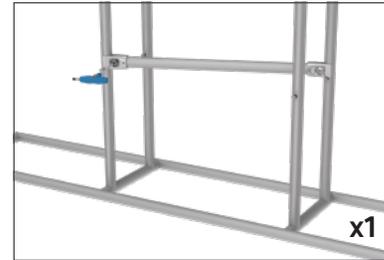



## COUNTER TOP SUPPORT:

For leveling end cap counter top.




## IFD-H-04F:

Assemble end cap on left side only.  
Use hand tool when shown.

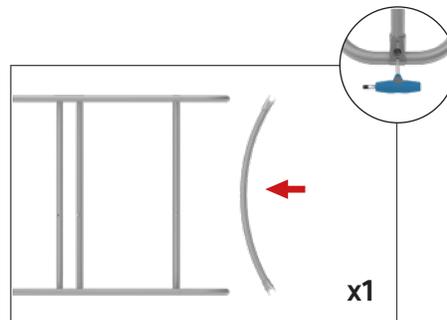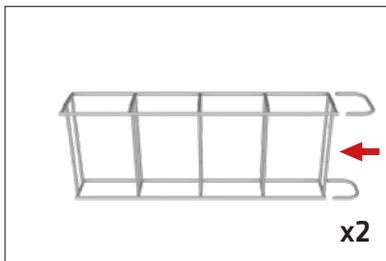

## CROSSBAR SUPPORT:

Attach across second opening from the left.

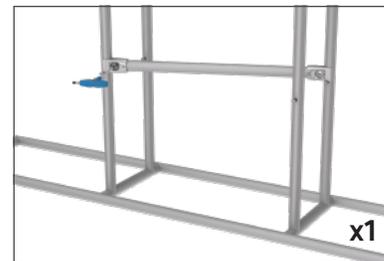

## COUNTER TOP SUPPORT:

For leveling end cap counter top.




## IFD-H-04F Front:

Do not assemble end caps for  
IFD-H-04CV Front counter.

Assemble crossbar support for  
IFD-H-04F Front counter.

## IFD-H-04CV Back

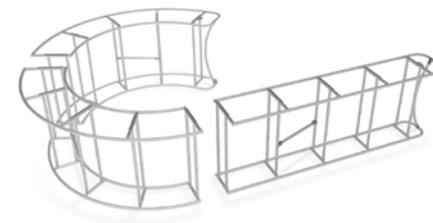


## IFD-H-04CV Front

## IFD-H-04F


# Set Up Instructions

# IFD-H-12J

**CONNECT FRAMES TOGETHER:**  
Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

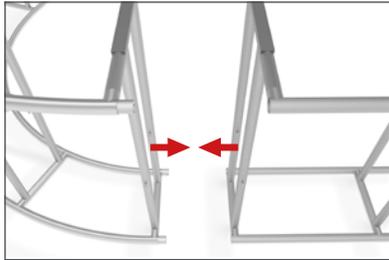


frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

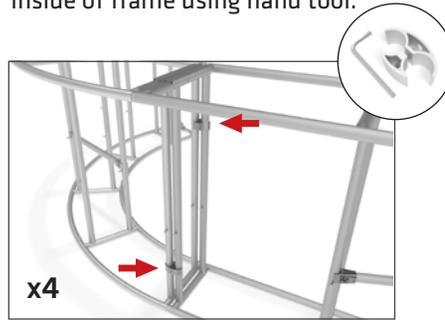


**WLM-P-SCS**


**SHELVES:**  
(OPTIONAL) To add shelves to frame, position and level shelf on

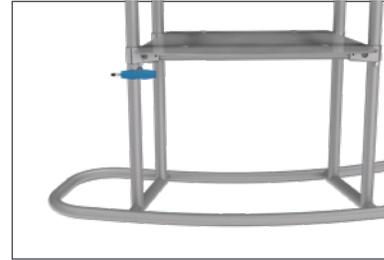


frame before tightening clamps down with hex tool.

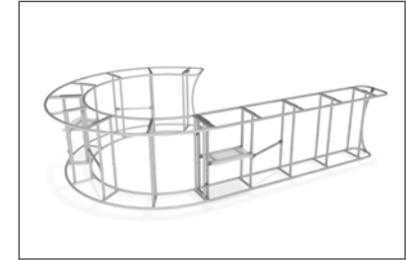


**GRAPHIC INSTALL:**  
**Step 1:** Unzip print and slide print onto frame like a pillow case.

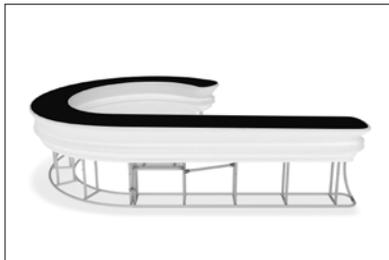


**Step 2:** Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

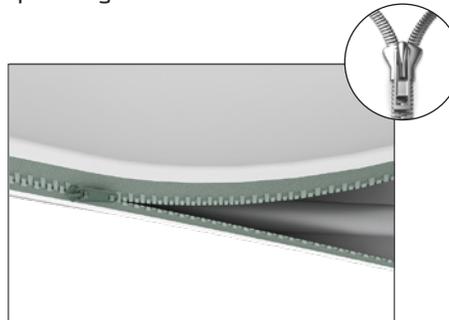

**Step 3:** Attach countertop panels to fabric counter with Velcro. Start at one end and work your way across to the other side.

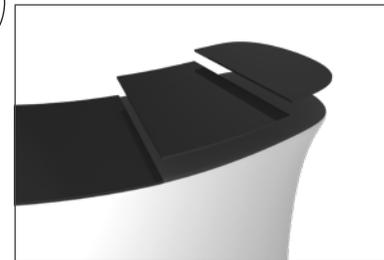

**Step 4:** Join counter top panels together front and back with black push-on clamps.

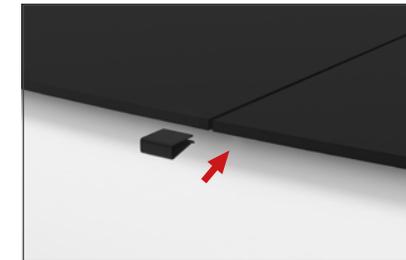



# Set Up Instructions










# IFD-H-12CO

### FRAME ASSEMBLY:

Assemble base parts and poles by pressing and pushing together.

### \*NOT ALL PARTS WILL BE USED:



This counter is made from x3 full kits and not all parts will be needed to complete this design.

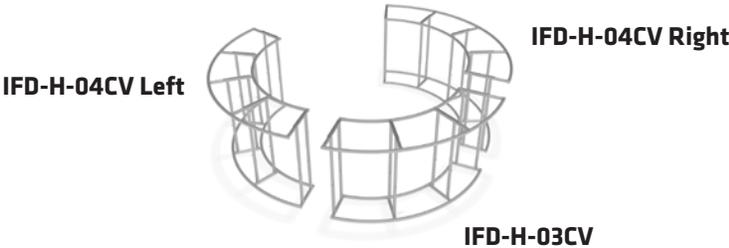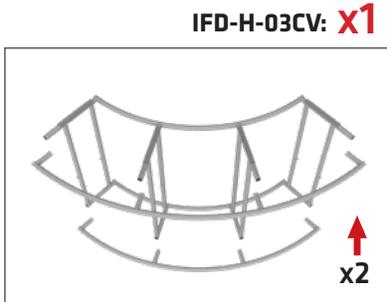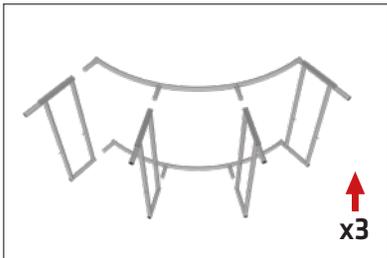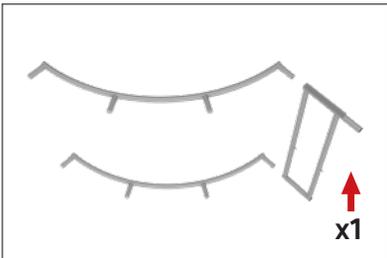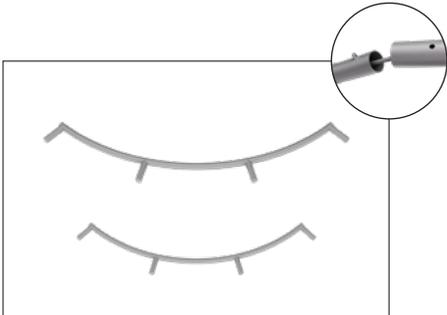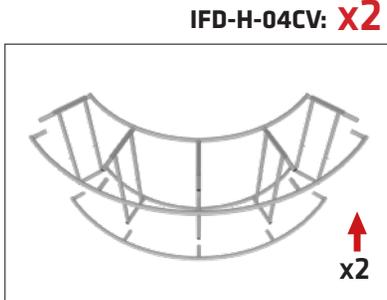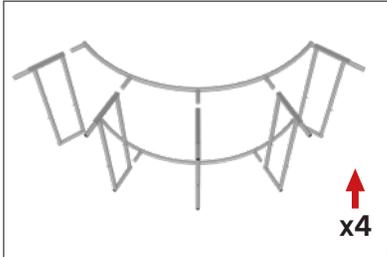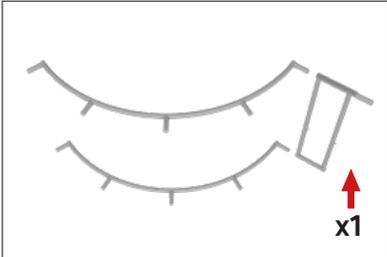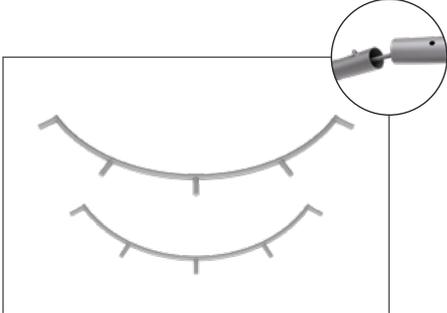


# Set Up Instructions

# IFD-H-12CO


**IFD-H-04CV Right:**  
Assemble end cap on right side only. Use hand tool when shown.

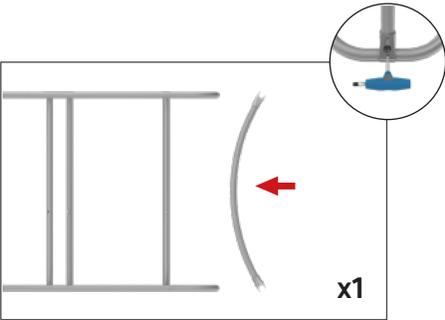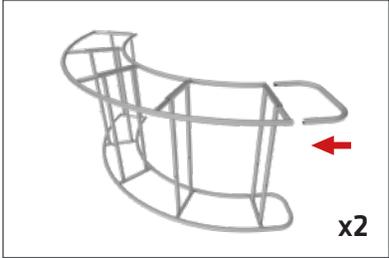



**CROSSBAR SUPPORT:**  
Attach across second opening from the right.

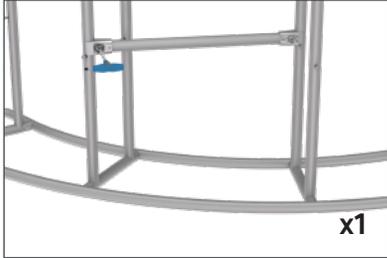

**COUNTER TOP SUPPORT:**  
For leveling end cap counter top.

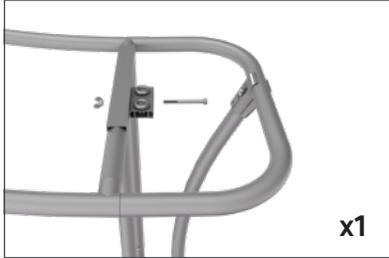

**IFD-H-04CV Left:**  
Assemble end cap on left side only. Use hand tool when shown.

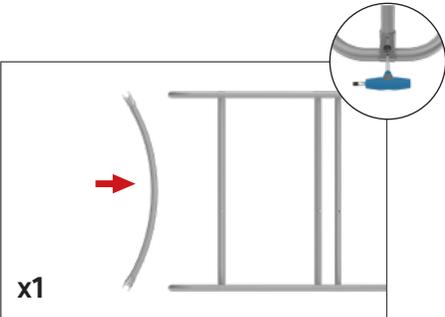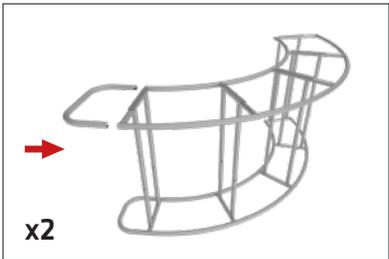

**CROSSBAR SUPPORT:**  
Attach across second opening from the left.




**COUNTER TOP SUPPORT:**  
For leveling end cap counter top.



**IFD-H-03CV:**  
Do not assemble end caps for IFD-H-03CV center counter.


Assemble crossbar support for IFD-H-03CV center counter.

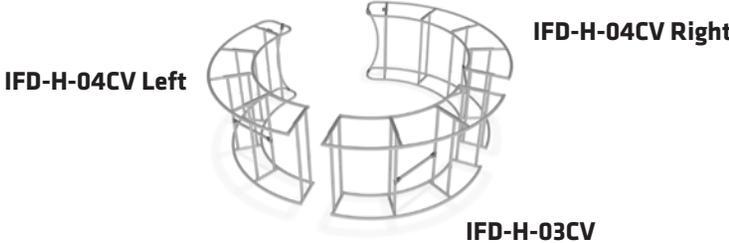


# Set Up Instructions

# IFD-H-12CO

**CONNECT FRAMES TOGETHER:**  
Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

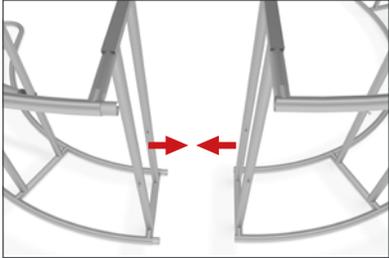

frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

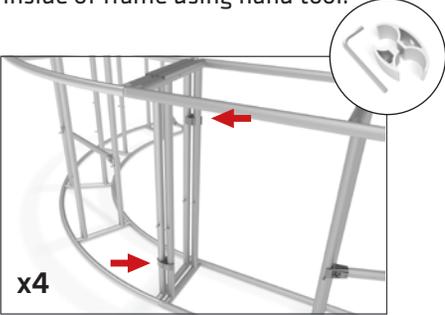


WLM-P-SCS


**SHELVES:**  
(OPTIONAL) To add shelves to frame, position and level shelf on




frame before tightening clamps down with hex tool.

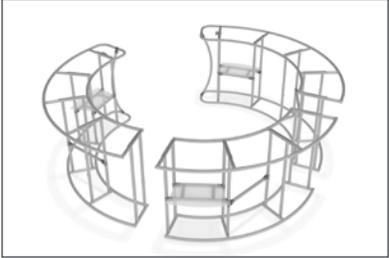


**GRAPHIC INSTALL:**  
**Step 1:** Unzip print and slide print onto frame like a pillow case.

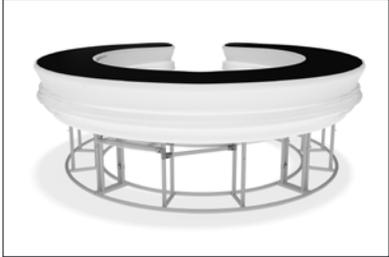


**Step 2:** Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

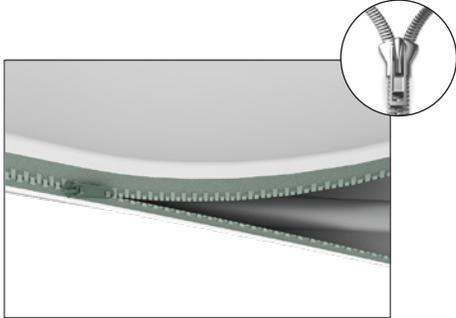

**Step 3:** Attach countertop panels to fabric counter with Velcro. Start at one end and work your way across to the other side.

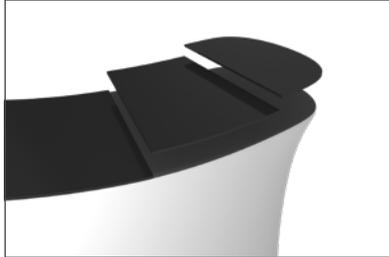

**Step 4:** Join counter top panels together front and back with black push-on clamps.

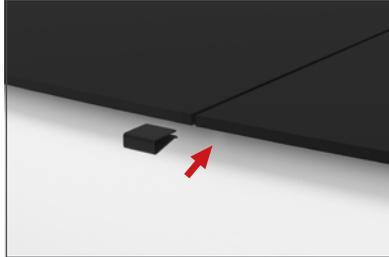



# Set Up Instructions










# IFD-H-12CC

### FRAME ASSEMBLY:

Assemble base parts and poles by pressing and pushing together.

### \*NOT ALL PARTS WILL BE USED:



This counter is made from x3 full kits and not all parts will be needed to complete this design.

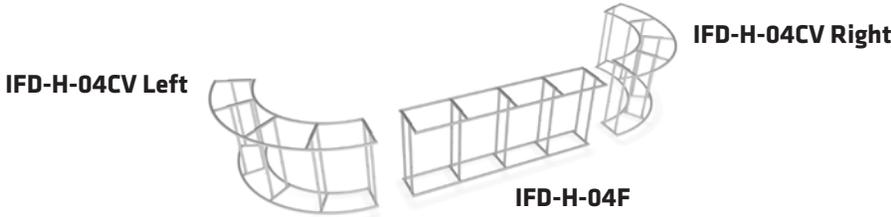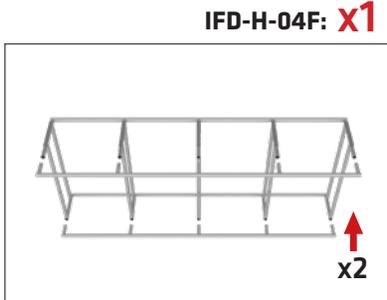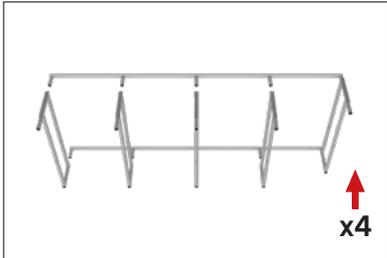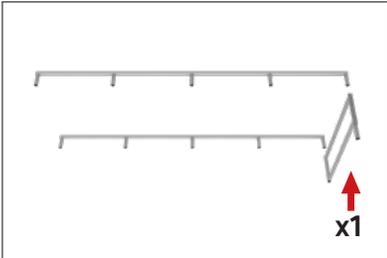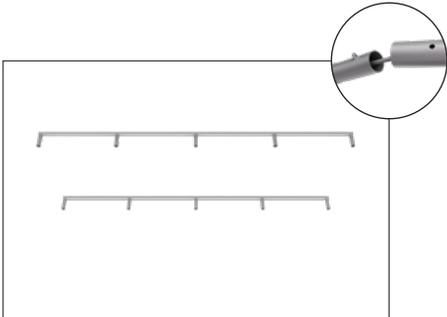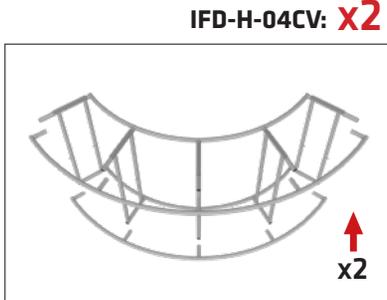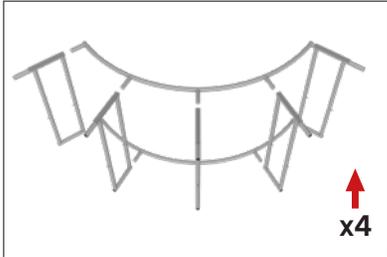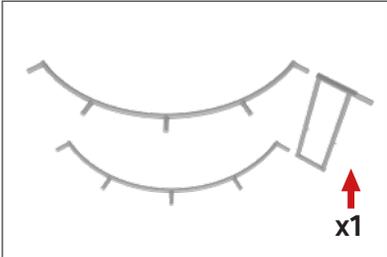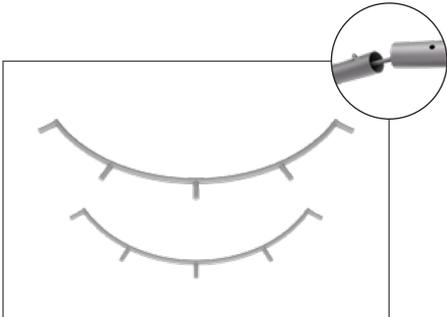


# Set Up Instructions

# IFD-H-12CC

**IFD-H-04CV Right:**  
Assemble end cap on right side only. Use hand tool when shown.

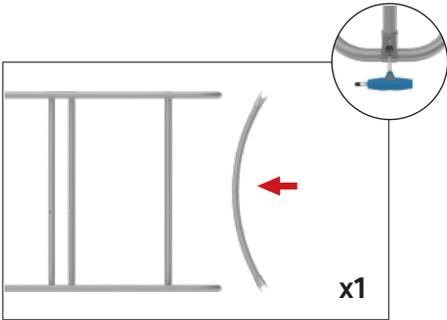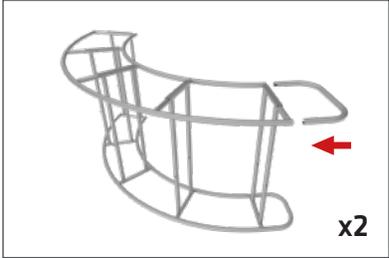



**CROSSBAR SUPPORT:**  
Attach across second opening from the right.

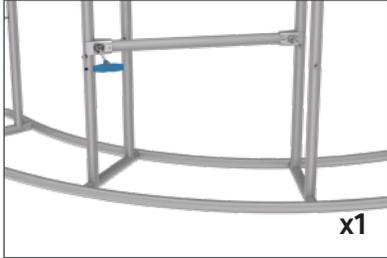

**COUNTER TOP SUPPORT:**  
For leveling end cap counter top.



**IFD-H-04CV Left:**  
Assemble end cap on left side only. Use hand tool when shown.

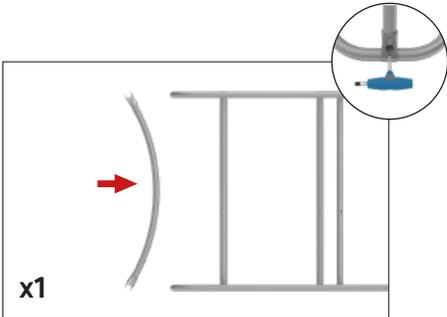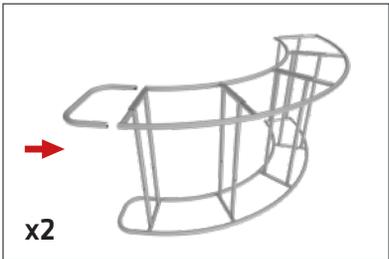

**CROSSBAR SUPPORT:**  
Attach across second opening from the left.




**COUNTER TOP SUPPORT:**  
For leveling end cap counter top.



**IFD-H-04F:**  
Do not assemble end caps for IFD-H-04F center counter.


Assemble crossbar support for IFD-H-04F center counter.

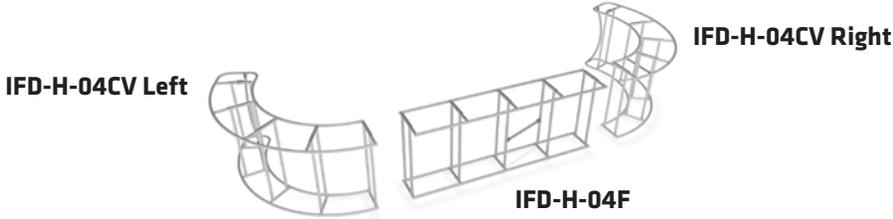


# Set Up Instructions

# IFD-H-12CO

**CONNECT FRAMES TOGETHER:**  
Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

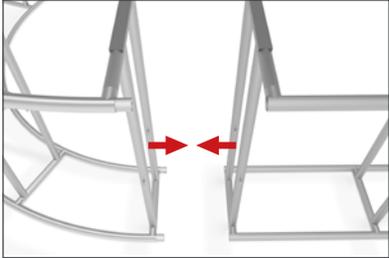

frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

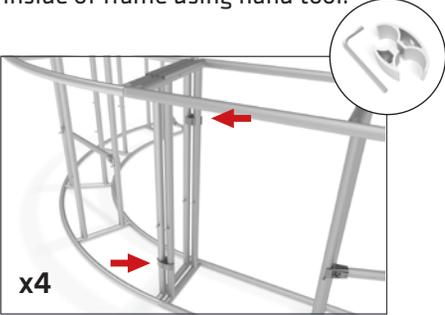


WLM-P-SCS


**SHELVES:**  
(OPTIONAL) To add shelves to frame, position and level shelf on




frame before tightening clamps down with hex tool.

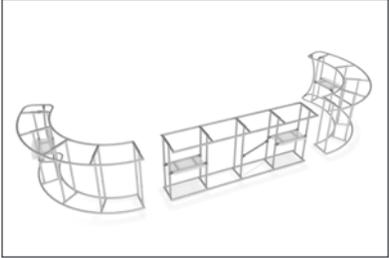


**GRAPHIC INSTALL:**  
**Step 1:** Unzip print and slide print onto frame like a pillow case.

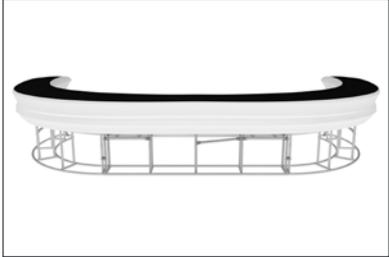



**Step 2:** Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

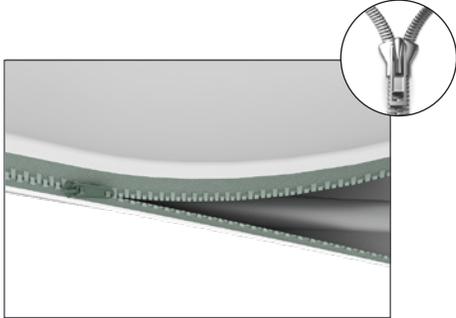

**Step 3:** Attach countertop panels to fabric counter with Velcro. Start at one end and work your way across to the other side.

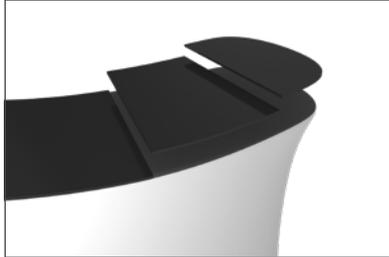

**Step 4:** Join counter top panels together front and back with black push-on clamps.

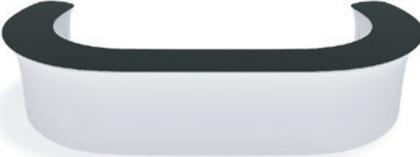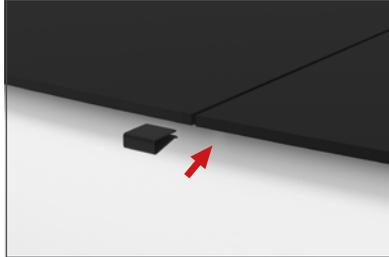



# Set Up Instructions

# IFD-H-12CW

**FRAME ASSEMBLY:**

Assemble base parts and poles by pressing and pushing together.

**\*NOT ALL PARTS WILL BE USED:**

This counter is made from x3 full kits and not all parts will be needed to complete this design.

