# Vector Frame Master 20ft Modular Backwall Kit 26

VF-K-26

The 10' x 20' inline Vector Frame™ Kit 26 is a robust modular exhibit that has a lot of bells and whistles! Extrusion frames are coupled with push-fit SEG graphics to create a sleek, seamless appearance. Functionality is delivered with a storage closet, slot wall for hanging merchandise and a monitor mount to hang a TV for promotional use.
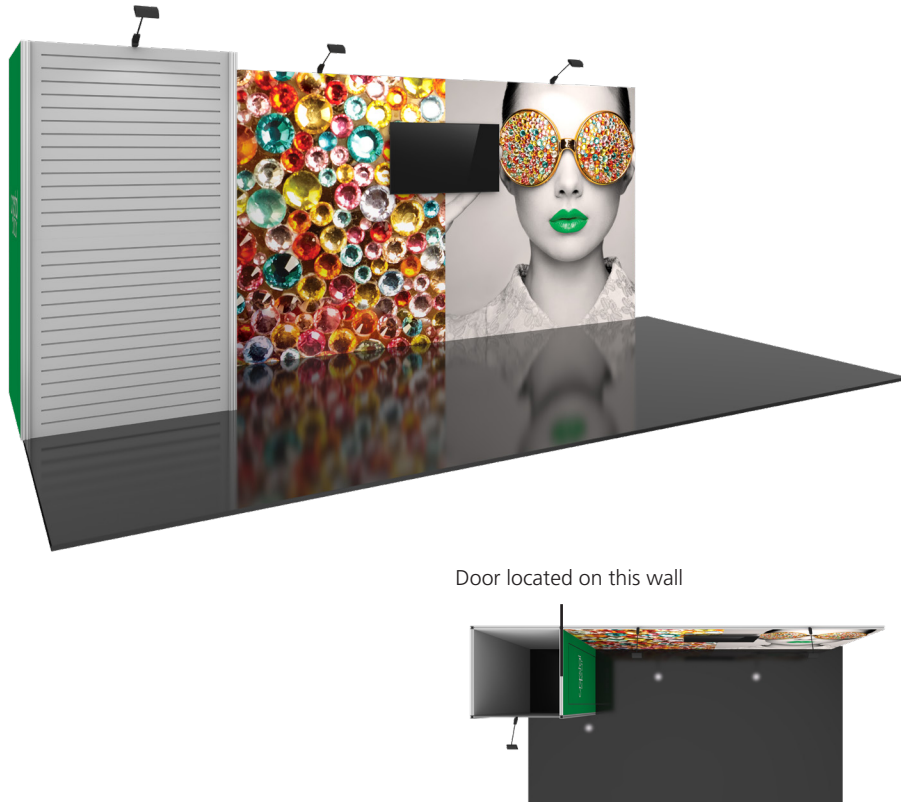
Features and benefits:

- 50mm silver extrusion frame
- Single-sided SEG push-fit fabric graphics
- 4'w x 4'd Storage closest for convenient storage with locking door
- Monitor mount supports 32"-55" monitors with a 40 lb. max capacity

- Three Lumina 2 LED lights
- Slot wall for product displays
- Ships freight in a wood crate
- Slot wall has a 30 lb. max capacity
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 228.35"w x 94.49"h x 51.18"d 5800mm(w) x 2400mm(h) x 1300mm(d) Approximate weight: 425 lbs / 193 kg	Refer to related graphic template for more information. Visit: https://www.theexhibitorshandbook.com/download-graphic-templates

Shipping	additional information:
Packing case(s): 1 HALF-WOODCRATE Shipping dimensions: WOOD-CRATE: 101"l x 31"h x 52.75"d 2566mm(l) x 788mm(h) x 1340mm(d) Approximate total shipping weight: 693 lbs / 314 kg	Graphic material: Dye-sublimate SEG push-fit fabric graphics When included in a larger order, a different packaging solution will be listed to accommodate all contents of the order. Individual packaging may no longer be provided.

Door located on this wall

Lighting Power Requirements:

Watts:	Amps:	Volts:
36W	3.6A	100-240V

This product may include the following materials for recycle: aluminum, select wood, fabric, cardboard, paper, steel, and plastics.

2 person assembly recommended:

Included In Your Kit

Tools, Components, & Connectors
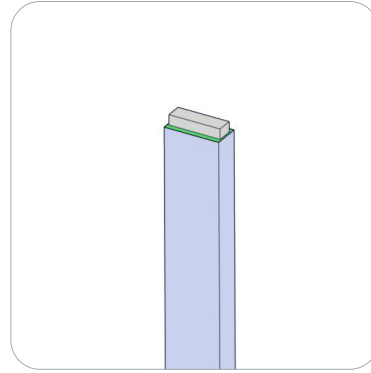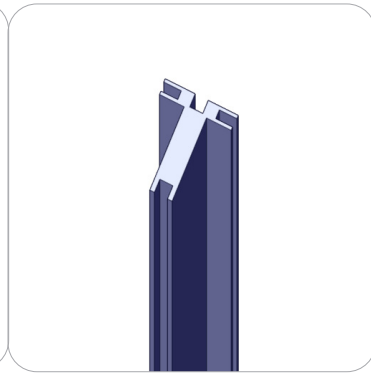
HEX-KEY-SET x1

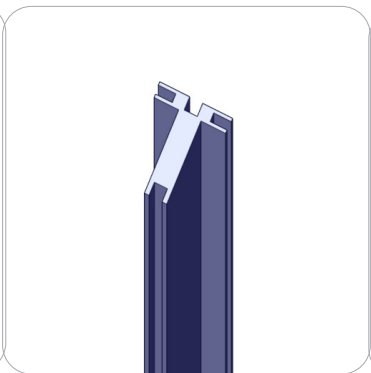FABRIC STEAMER-ES x1

5MM-ALLEN-T x1
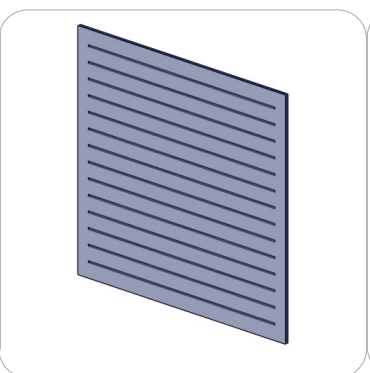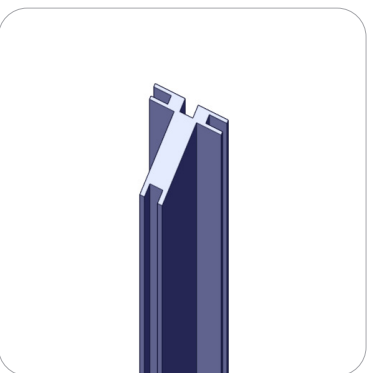
VF-FCDOOR-50MM-1200-L x1

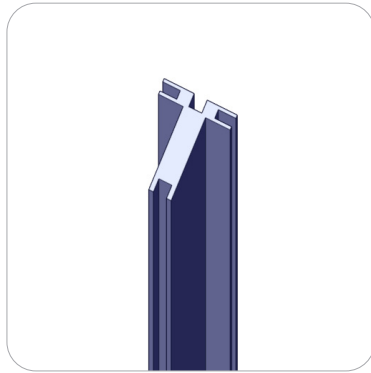LUM-LED2-ORL-B x3

PH1-2310-L-L x1
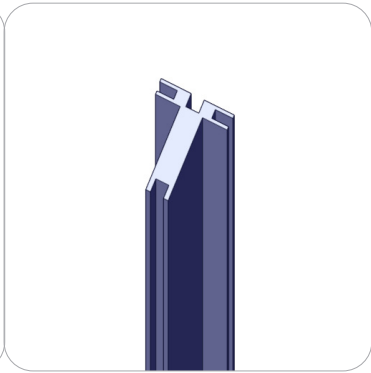
PHFC2-2100-L1-MCB9 x2

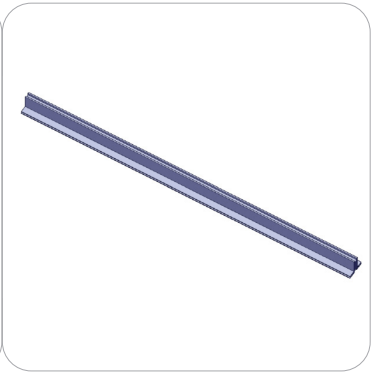PHFC2-2400-L1-MCB9 x2

LP-PS-1200-1200 x2
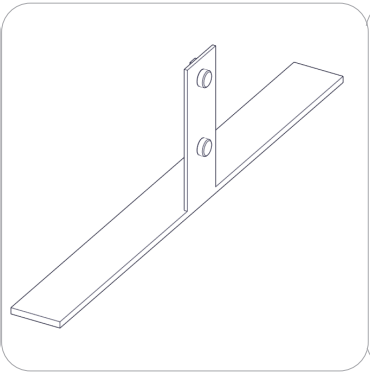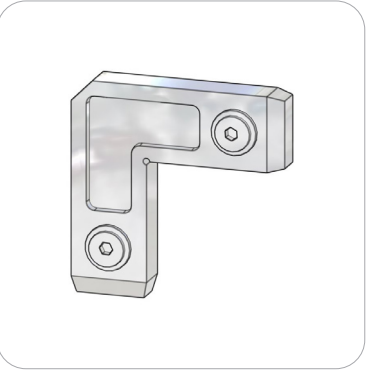
PHFC4-2400-MCB9-MCB9 x1

PHFC2-1200-MCB9-MCB9 x2

PHFC2-1500-MCB9-MCB9 x4

PHFC2-1200-L-L x2

SW-FOOT-500-LN x1

CB9 x8

Included In Your Kit

FREESTANDING-SPLIT-MM-2 x1
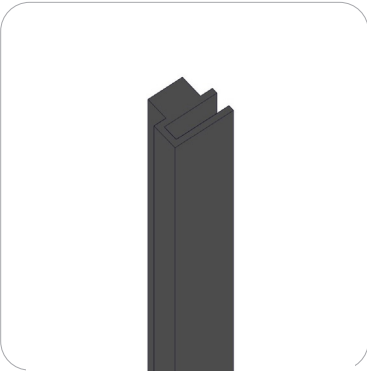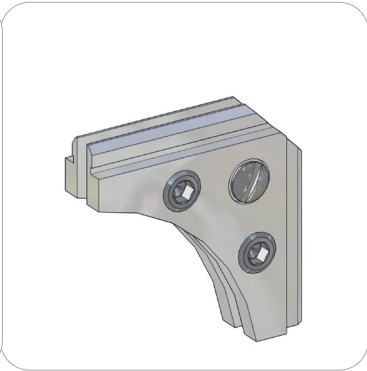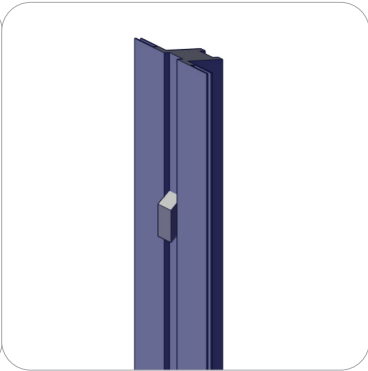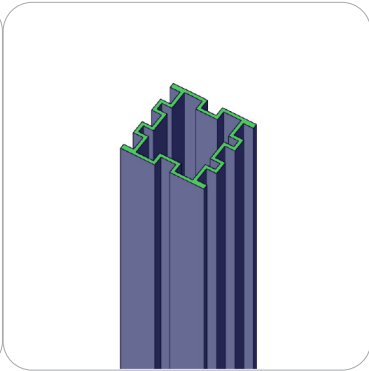

FC-2386 x8

CBE-50 x4

PHFC2-2400-MCB9-MCB9-SIDE x3

PM2S2-2400 x4

IB2 x2

Tools, Components, & Connectors
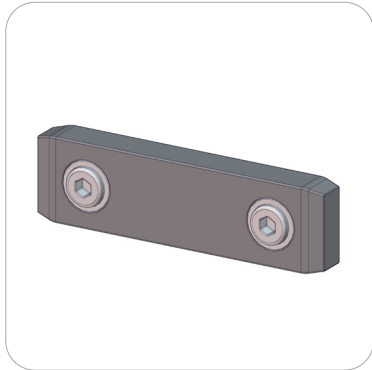
Included In Your Kit

Graphics
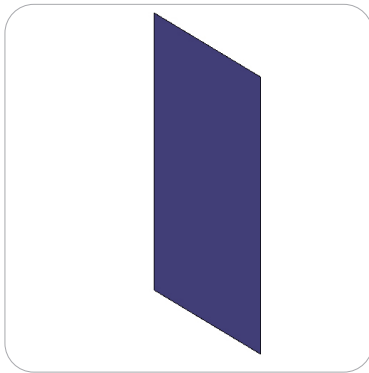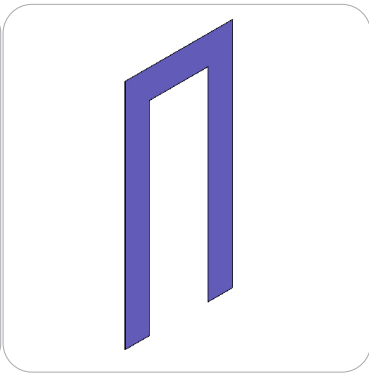
| VF-K-26-A-G x1 | VF-K-26-B-G x1 | VF-K-26-C-G x1 | VF-K-26-D-G x1 |
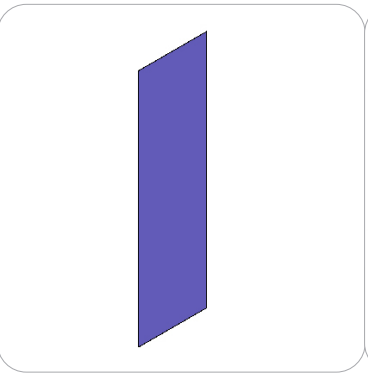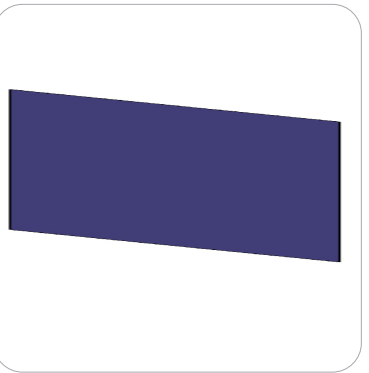
Liners
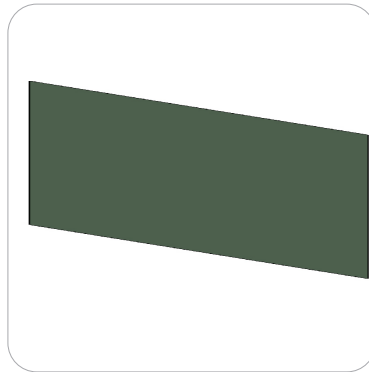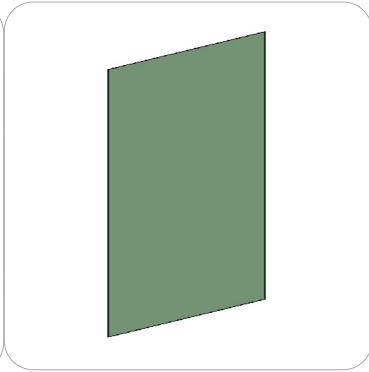
| VF-K-26-K-G x1 | VF-K-26-J-G x1 | VF-K-26-I-G x1 | VF-K-26-H-G x1 | VF-K-26-G-G x1 |
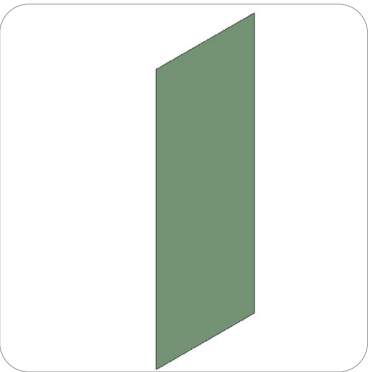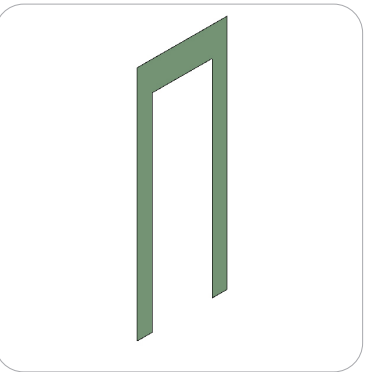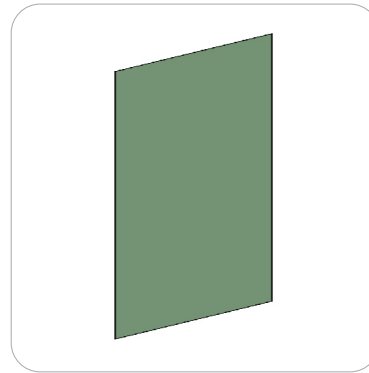
VF-K-26-F-G x1

Kit Components

VF-K-26

50MM CLOSET

VECTOR BACKWALL
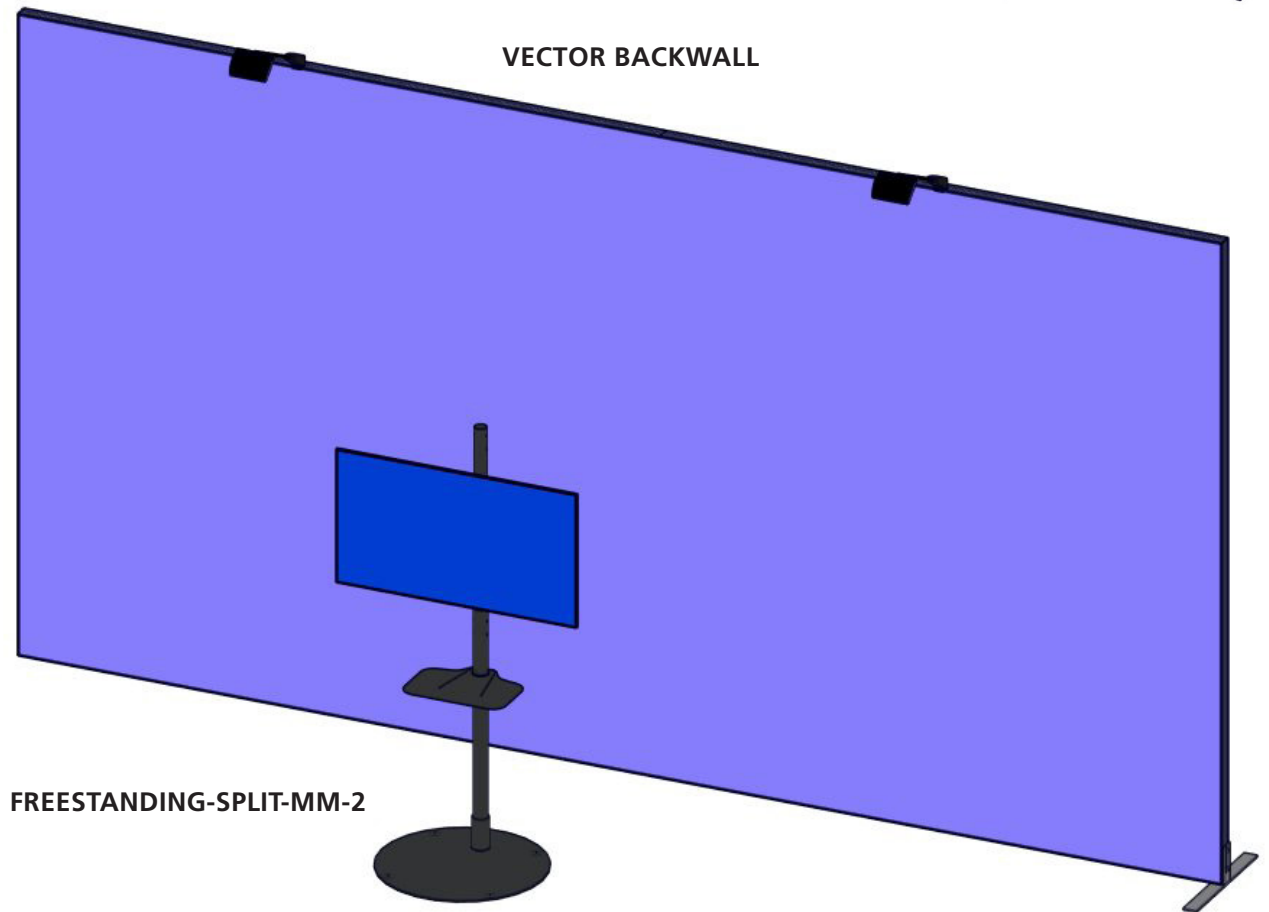
FREESTANDING-SPLIT-MM-2
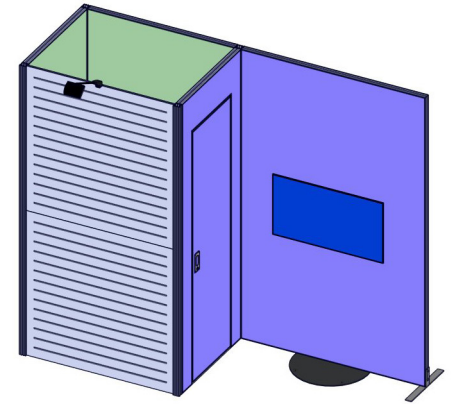
Closet Assembly

For this step you will need:
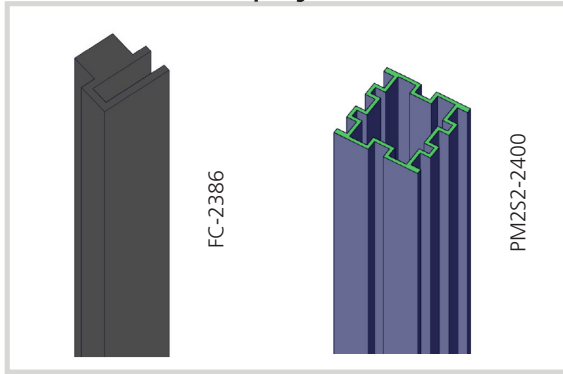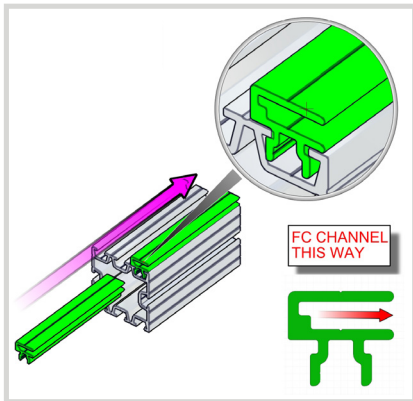
FC-2386

PM2S2-2400

1

Slide FC Channels into the outside channels of the PM2S2 facing the door frame.

FC CHANNEL THIS WAY

1

PM2S2-2400

FC-2386

1

1

FC-2386

PM2S2-2400

1

1

Completed Step

Closet Assembly
For this step you will need:

VF-FCDOOR-50MM-1200-L

PM2S2-2400

2

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

UNLOCK   LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY

Using the 5mm Allen-T attach the PHFC2s at the top and bottom of your door frame to two of your PM2S2s.

3

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

UNLOCK   LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY
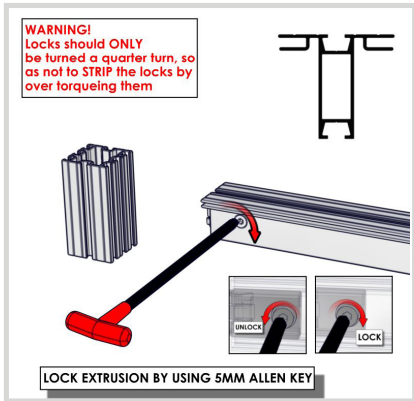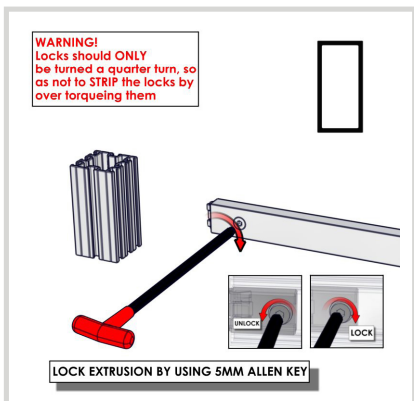
Using the 5mm Allen-T attach the PH1s on your door frame to two of your PM2S2s.
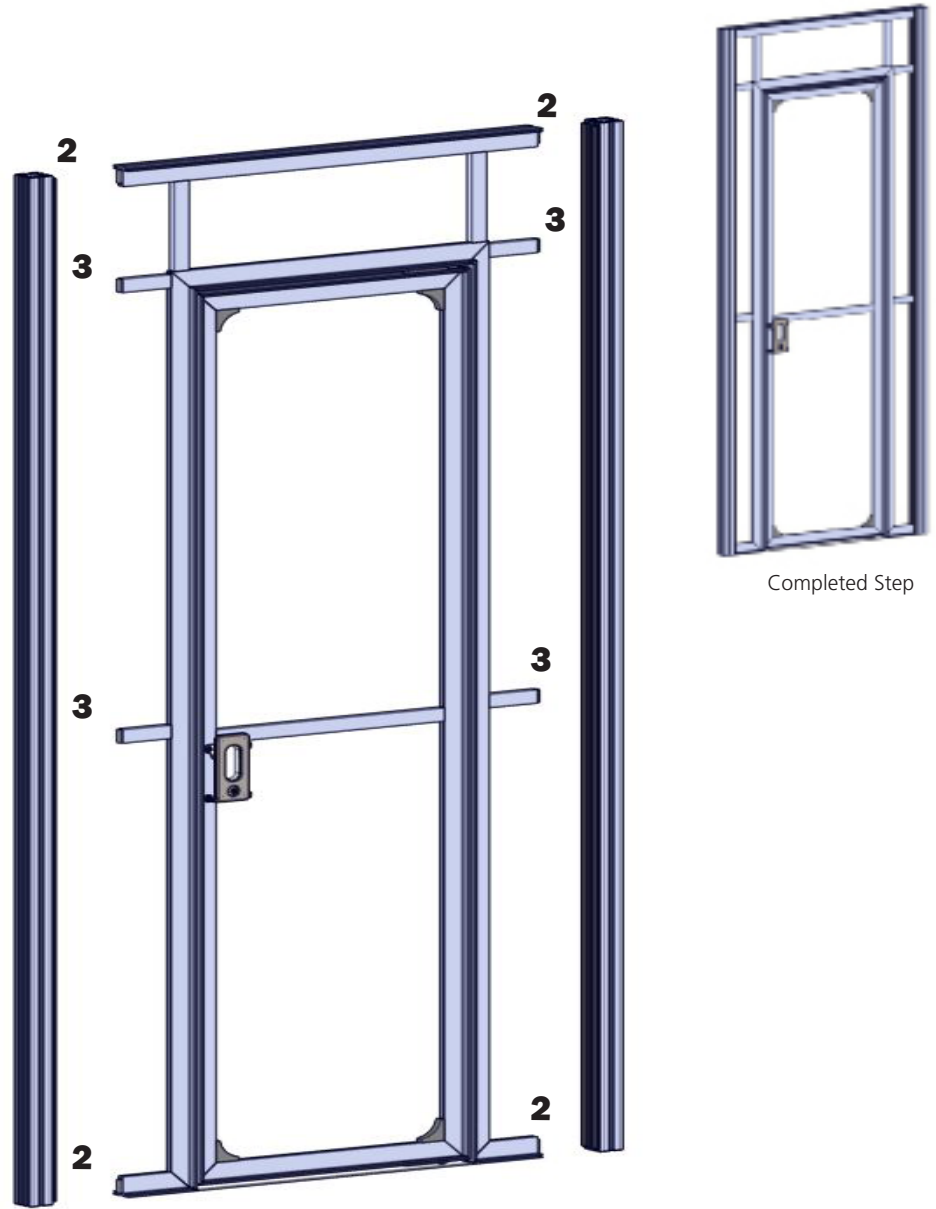
Completed Step

Door frame comes assembled
DO NOT DISASSEMBLE

Closet Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9

PHFC2-1200-MCB9-MCB9

CB9

4

CB9

5MM ALLEN KEY

1-

UNLOCK   LOCK

LOCK

1- SLIDE CB9 TOGETHER WITH EXTRUSION.
2- THEN TIGHTEN THE SCREWS TO LOCK EXTRUSION TOGETHER.
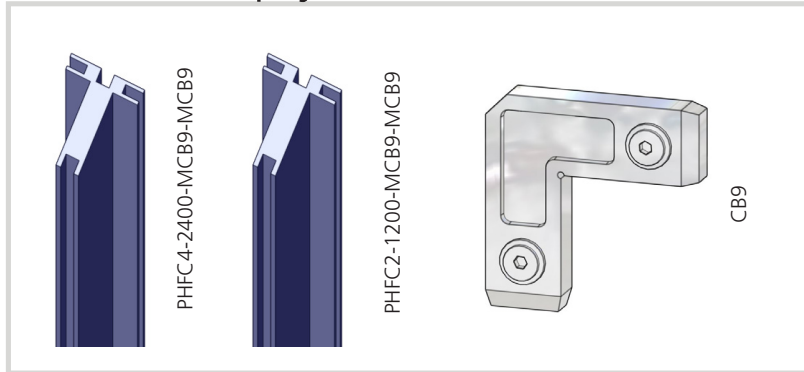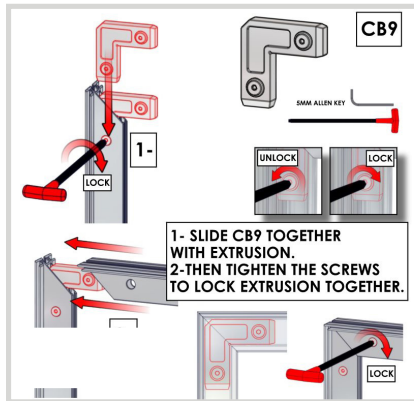
LOCK

Attach the back frame of the closet together using the Allen Tool and the CB9 Connectors.

4 PHFC2-1200-MCB9-MCB9 **4**

PHFC4-2400-MCB9-MCB9

PHFC4-2400-MCB9-MCB9

4 PHFC2-1200-MCB9-MCB9 **4**

Completed Step

Closet Assembly
For this step you will need:

PHFC4-2400-MCB9-MCB9

PM2S2-2400

5

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

These will attach the PHFC2 to the side of the PMFC2. So you can connect your completed door frame with the back frame.

5

5

Completed Step

Closet Assembly
For this step you will need:

PM2S2-2400

PHFC2-1200-L-L

FC-2386

6

SLIDE FC INTO CHANNEL

FC CHANNEL THIS WAY

Slide FC Channels into the outside channels of the PM2S2 facing the door frame.

7

n, so s by over torqueing them

UNLOCK

LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY

Using the 5mm Allen-T attach the PHFC2s at the top and bottom of your door frame to two of your PM2S2s.

7

PHFC2-1200-L-L

7

FC-2386

FC-2386

PM2S2-2400

PM2S2-2400

6

6

7

PHFC2-1200-L-L

7

Completed Step

Closet Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9

PM2S2-2400

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

These will attach the PHFC2 to the side of the PMFC2. So you can connect your completed door frame with the back frame.
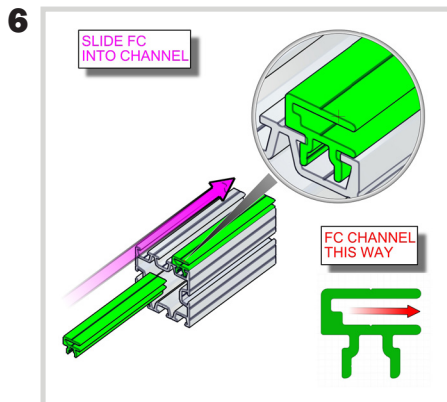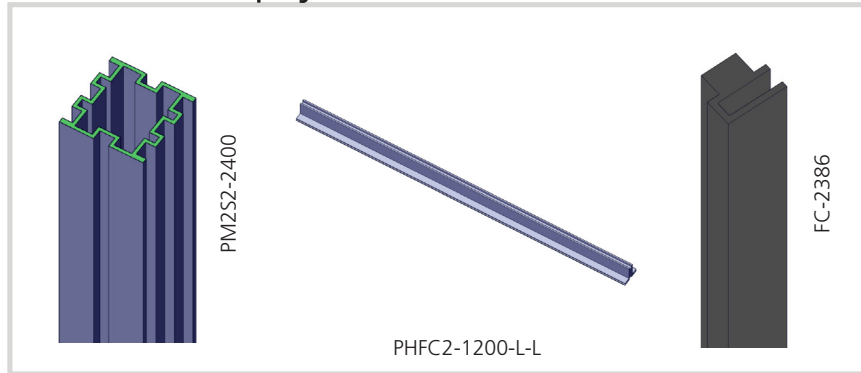
8

8

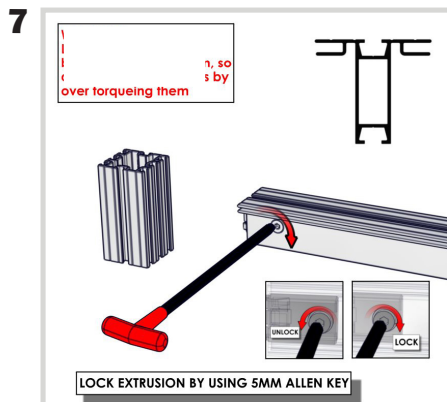Completed Step
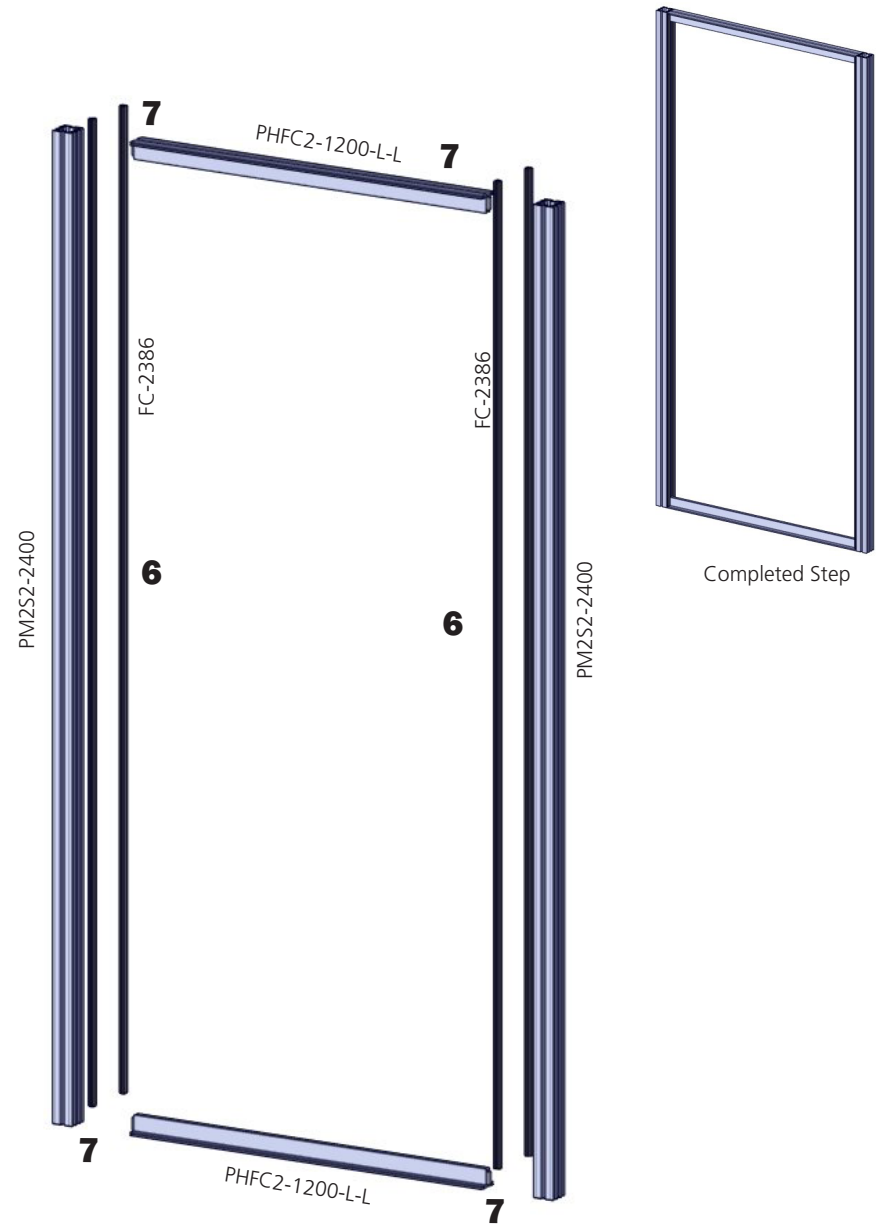
Closet Assembly

For this step you will need:

PM2S2-2400

LUM-LED2-ORL-B

PS-1200-1200

9

PM2S2

Lock Panel by using 5mm T-Handle

Slide the lock panels into the PM2S2 then using the Allen-T lock the panels into place.

10

LUM-LED2-ORL LIGHT

1-

2-

Using the bottom clip attached to the light slip the plastic bottom into the channel on top of the lock panel.

10

9

9

9
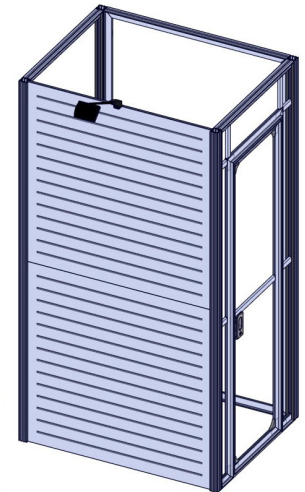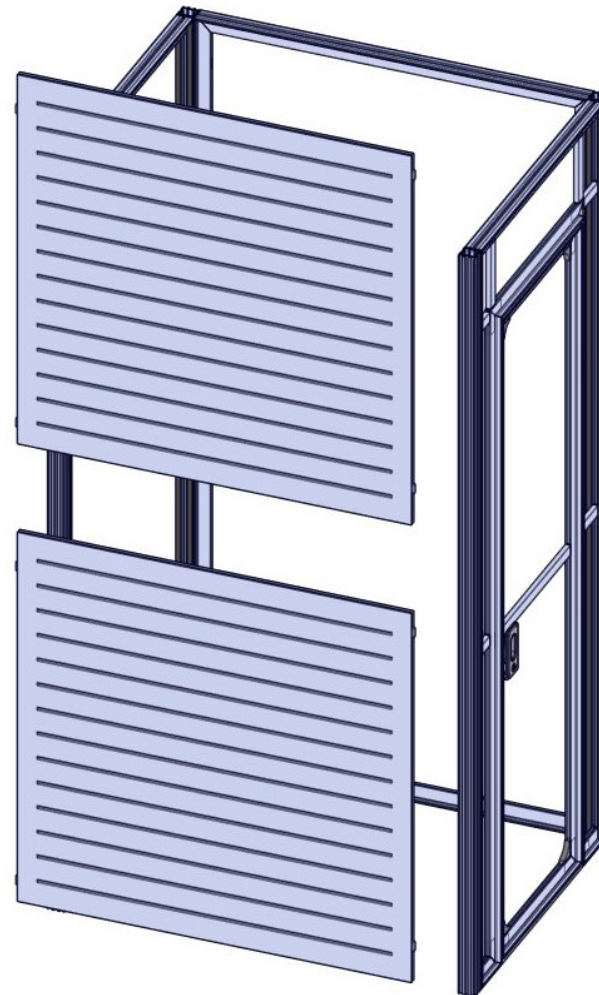
Completed Step

Graphic and Back Liner Application

For this step you will need:

VF-K-26-A-G

VF-K-26-B-G

VF-K-26-C-G

VF-K-26-J-G x1

11 FCE-2 TO PHFC2

FABRIC

START ON
FOUR CORNERS

1- Install fabric by pressing the FCE-2 into
4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE
PERIMETER OF THE FRAME WORK.

PULL TABS
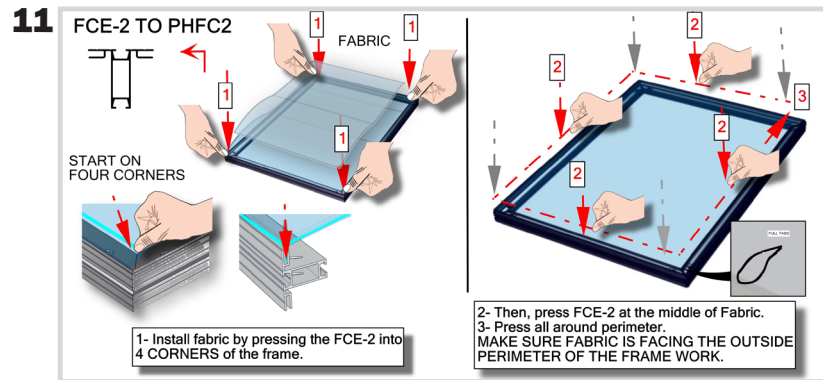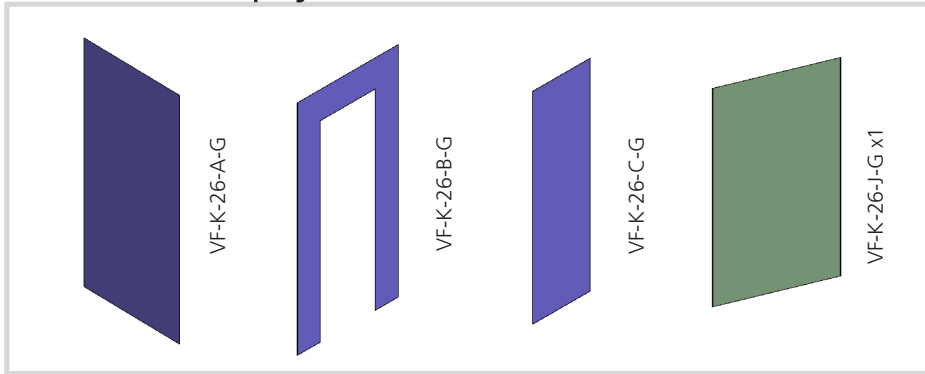
Place the FCE-2 part of the graphic into the outer channels of the PHFC2.

12 FCE-2 TO FC

FABRIC

START ON
FOUR CORNERS

1- Install fabric by pressing the FCE-2 into
4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE
PERIMETER OF THE FRAME WORK.

PULL TABS
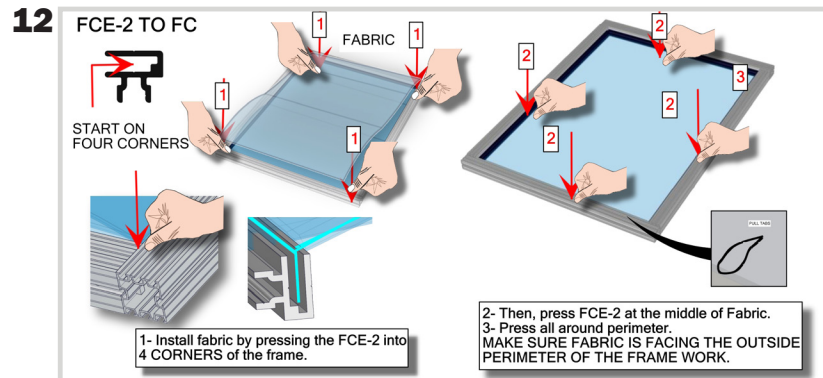
Place the FCE-2 part of the graphics into the FC channel that's attached to the
PM2S2 extrusions.

11

12

12

Completed Step

13

Liner Application
For this step you will need:

VF-K-26-I-G

VF-K-26-G-G

VF-K-26-H-G

VF-K-26-F-G x1

13 FCE-2 TO PHFC2

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.

PULL TABS

Place the FCE-2 part of the liner into the outer channels of the PHFC2.

14 FCE-2 TO FC

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.
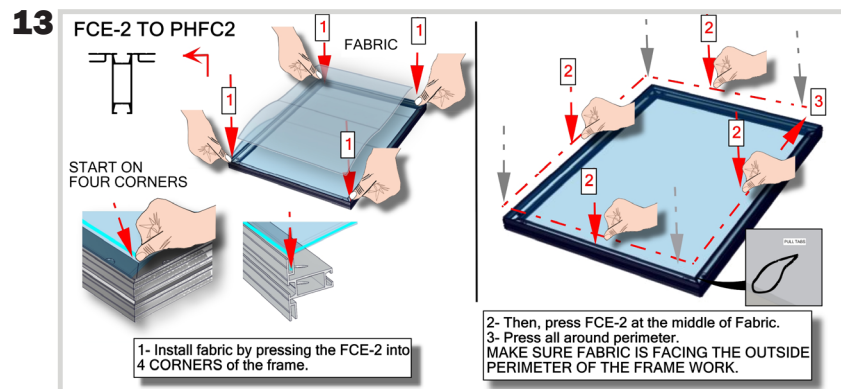
2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.

PULL TABS

Place the FCE-2 part of the liner into the FC channel that's attached to the PM2S2 extrusions.
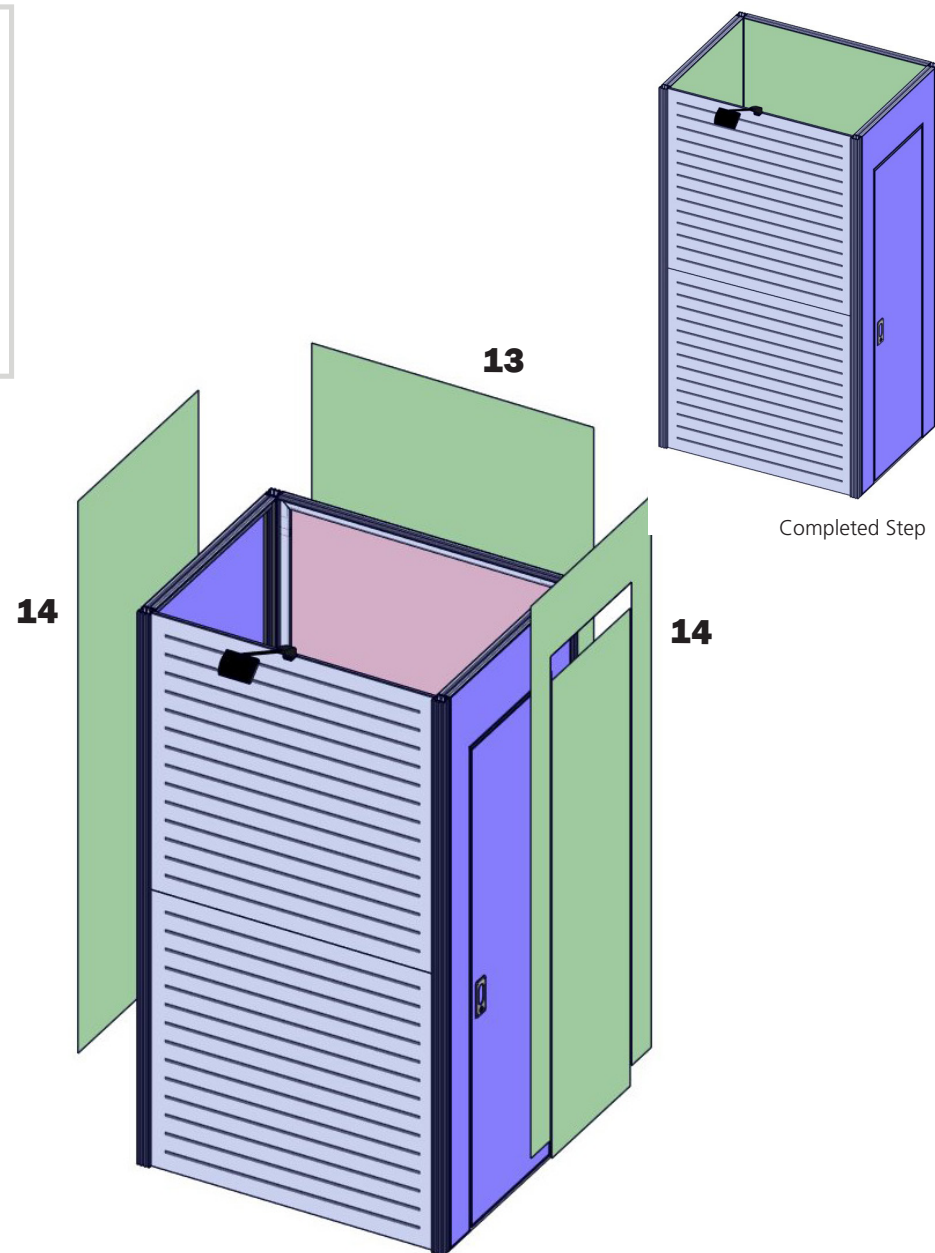
13

Completed Step

14

14

Backwall Assembly

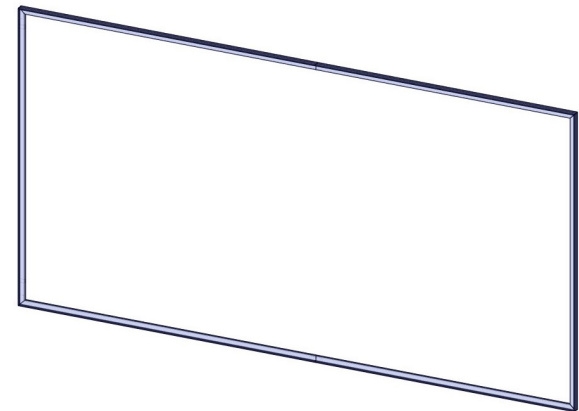## For this step you will need:

PHFC4-2400-MCB9-MCB9

PHFC2-2100-L1-MCB9

PHFC2-2400-L1-MCB9

IB2

CB9

Completed Step

15

CB9

5MM ALLEN KEY

1-

UNLOCK / LOCK

LOCK

1- SLIDE CB9 TOGETHER WITH EXTRUSION.
2-THEN TIGHTEN THE SCREWS TO LOCK EXTRUSION TOGETHER.

2-

LOCK

Attach the backwall together using the Allen Tool and the CB9 Connectors.

16

5MM T HANDLE

1-Slide the IB2 into extrusion.
2-Then tighten the screws to lock both extrusions together.

IB2

1-

2-

5MM ALLEN KEY
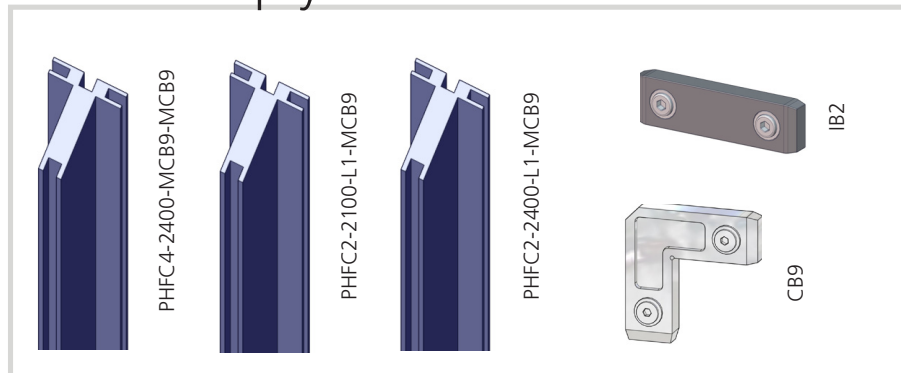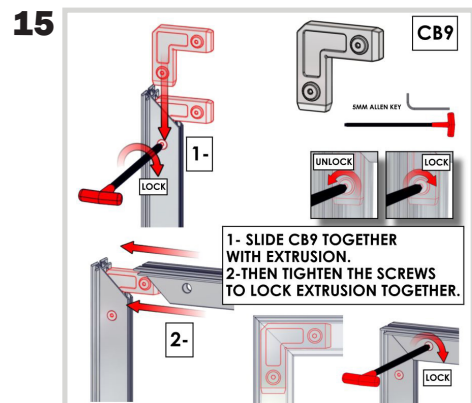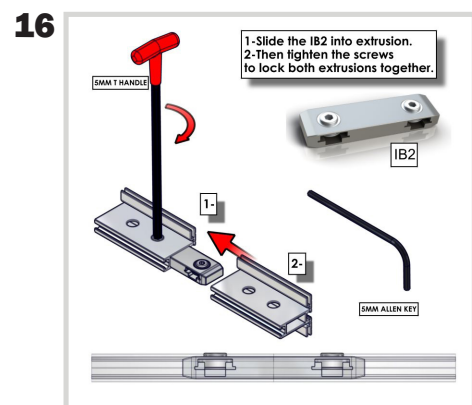
Attach the backwall together using the Allen Tool and the IB2 Connectors.

15

PHFC2-2400-L1-MCB9

16

PHFC2-2100-L1-MCB9

15

PHFC4-2400-MCB9-MCB9

PHFC4-2400-MCB9-MCB9

15

PHFC2-2400-L1-MCB9

16

PHFC2-2100-L1-MCB9

15

Backwall Assembly
For this step you will need:

PHFC4-2100-L1-MCB9

PH1-2310-L-L

SW-FOOT-500-LN

17

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

UNLOCK

LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY

Attach the backwall together using the Allen Tool and the CB9 Connectors.

18

1- LOOSE THUMBSCREWS

LN-100

2- SLIDE EXTRUSION INTO LN-100

3- GENTLY TIGHTEN SW-FOOT IN PLACE

SW-FOOT

Slide the baseplate on the side of the extrusion in the channel then screw in place with the thumbscrew.

Completed Step

PHFC4-2400-L1-MCB9

PHFC4-2100-L1-MCB9

17

PH1-2310-L-L

PHFC4-2400-L1-MCB9

17

PHFC4-2100-L1-MCB9

18

Backwall Assembly
For this step you will need:

PHFC4-2100-L1-MCB9

LUM-LED2-ORL-B

19

LUM-200-ORL LIGHT
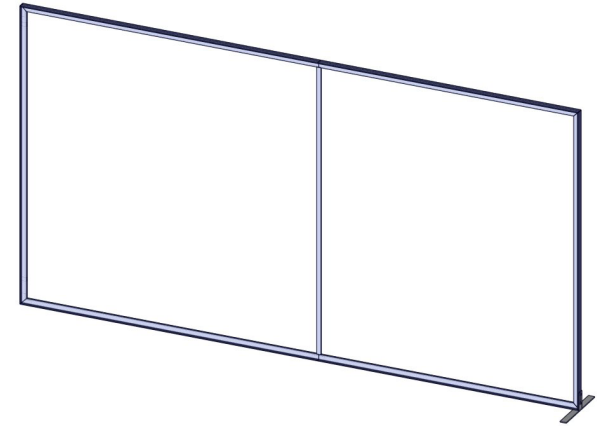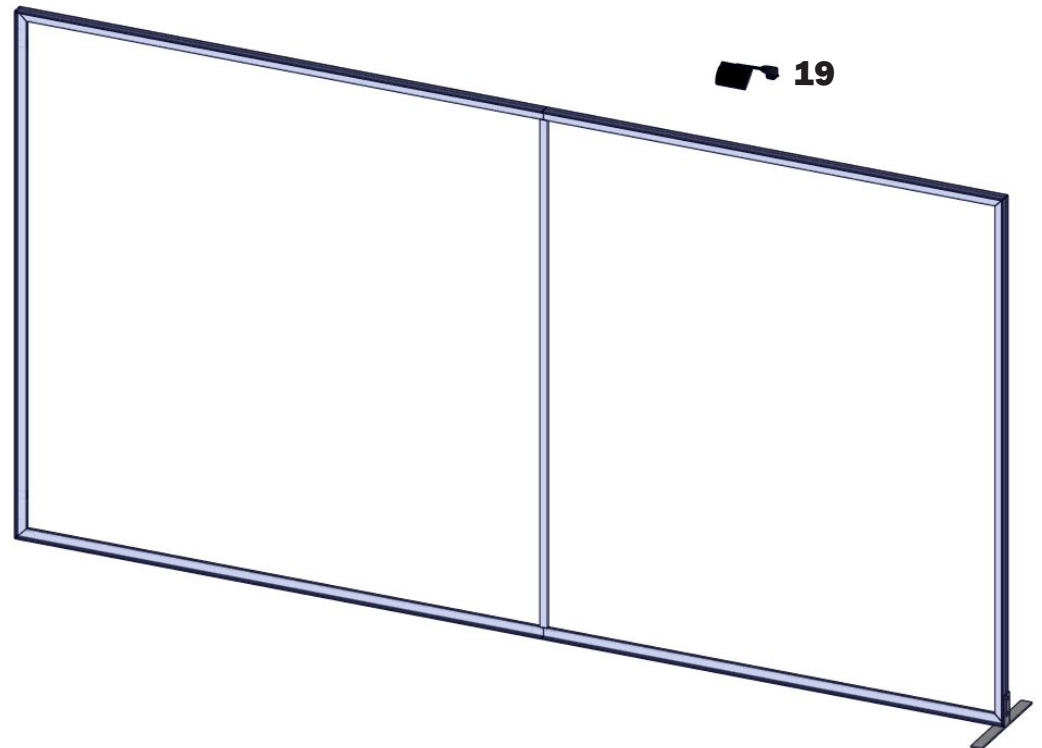
1-

2-

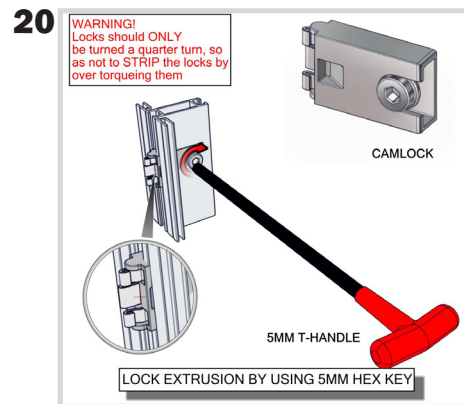Using the bottom clip attached to the light slip the plastic bottom into the channel on top of the PHFC2.

Completed Step

19

19

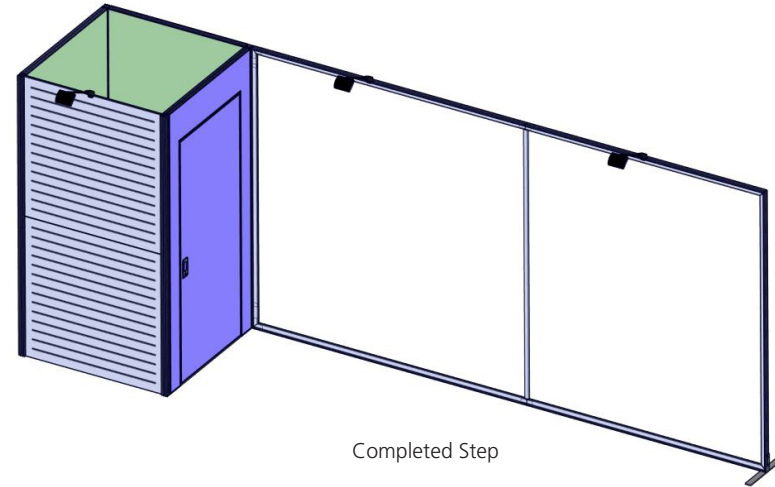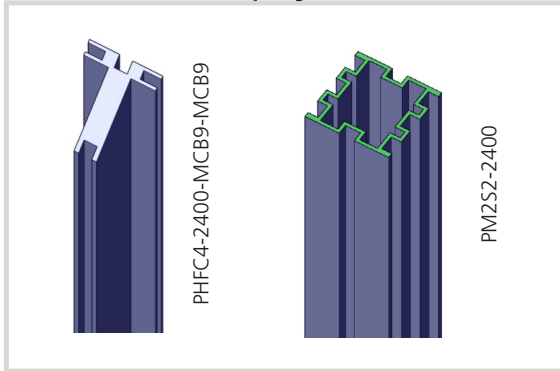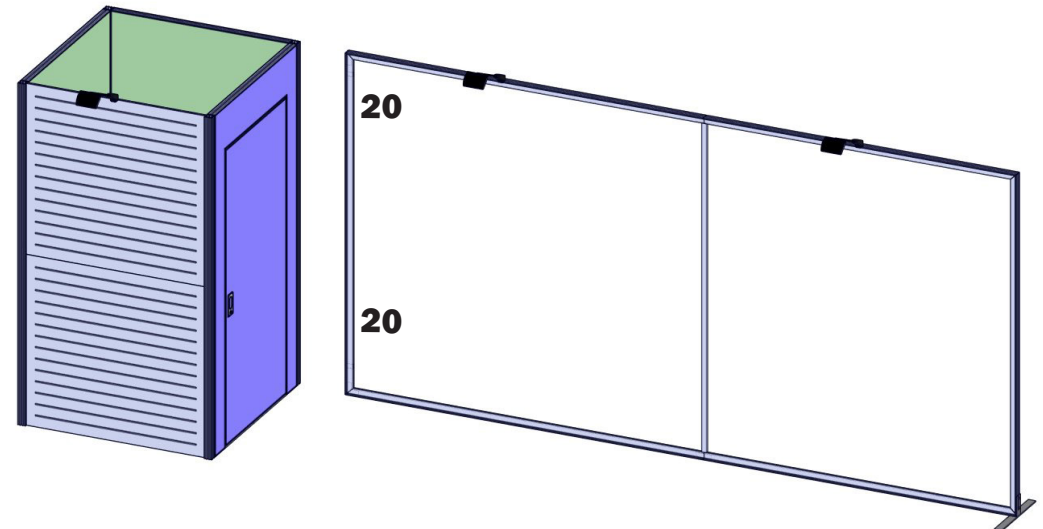# Closet and Backwall Assembly
For this step you will need:

PHFC4-2400-MCB9-MCB9

PM2S2-2400

Completed Step

20

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

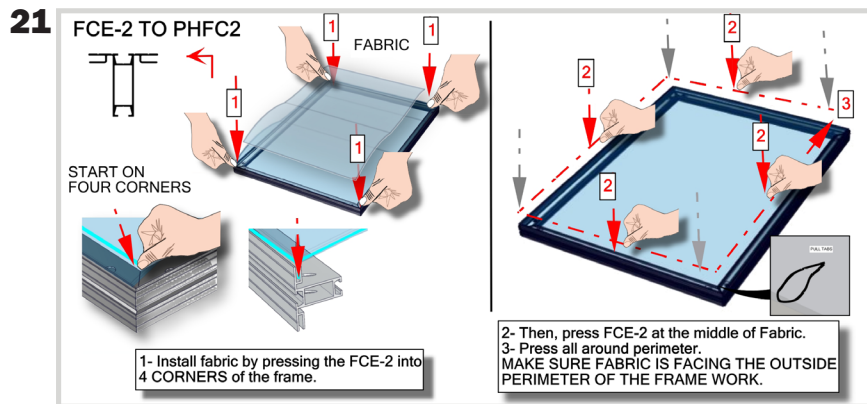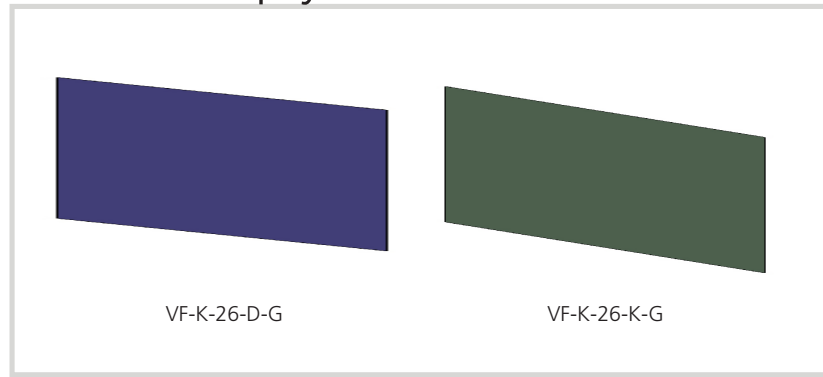LOCK EXTRUSION BY USING 5MM HEX KEY

These will attach the PHFC2 to the
side of the PMFC2. So you can
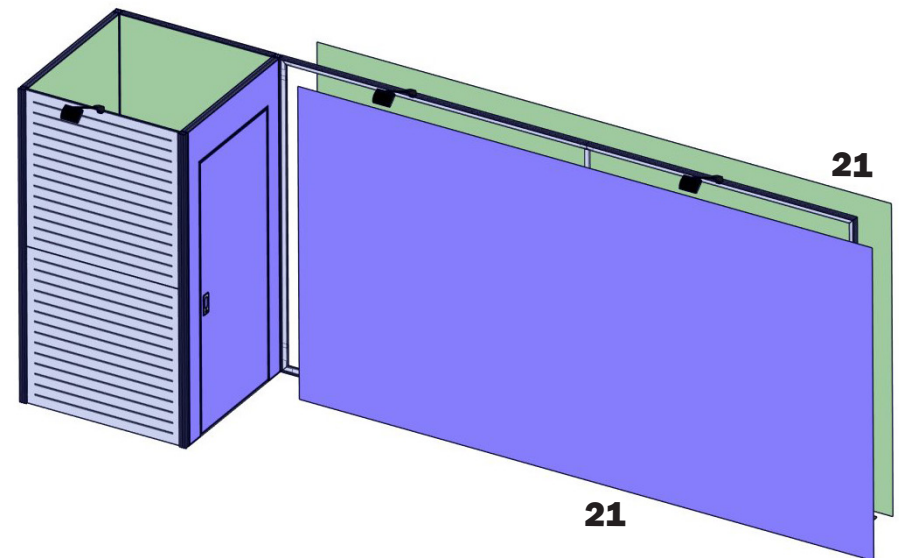connect your closet and backwall.

20

20
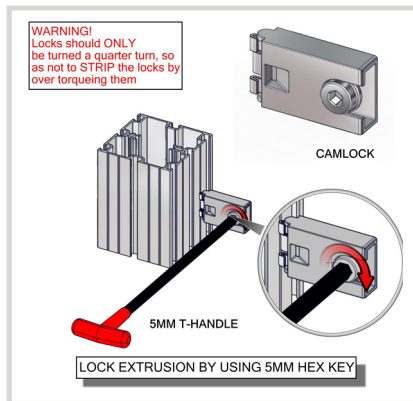
Backwall Graphic Application
## For this step you will need:

VF-K-26-D-G   VF-K-26-K-G

21 FCE-2 TO PHFC2

FABRIC

START ON
FOUR CORNERS

1- Install fabric by pressing the FCE-2 into
4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE
PERIMETER OF THE FRAME WORK.

PULL FABRIC

Place the FCE-2 part of the graphic and liner into the outer channels of the PHFC2.

Completed Step

21

21
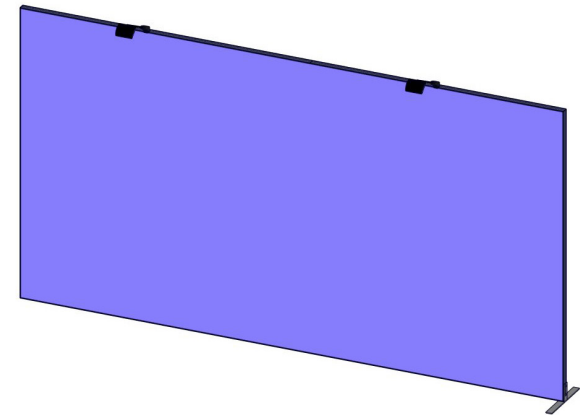
Completing your Kit
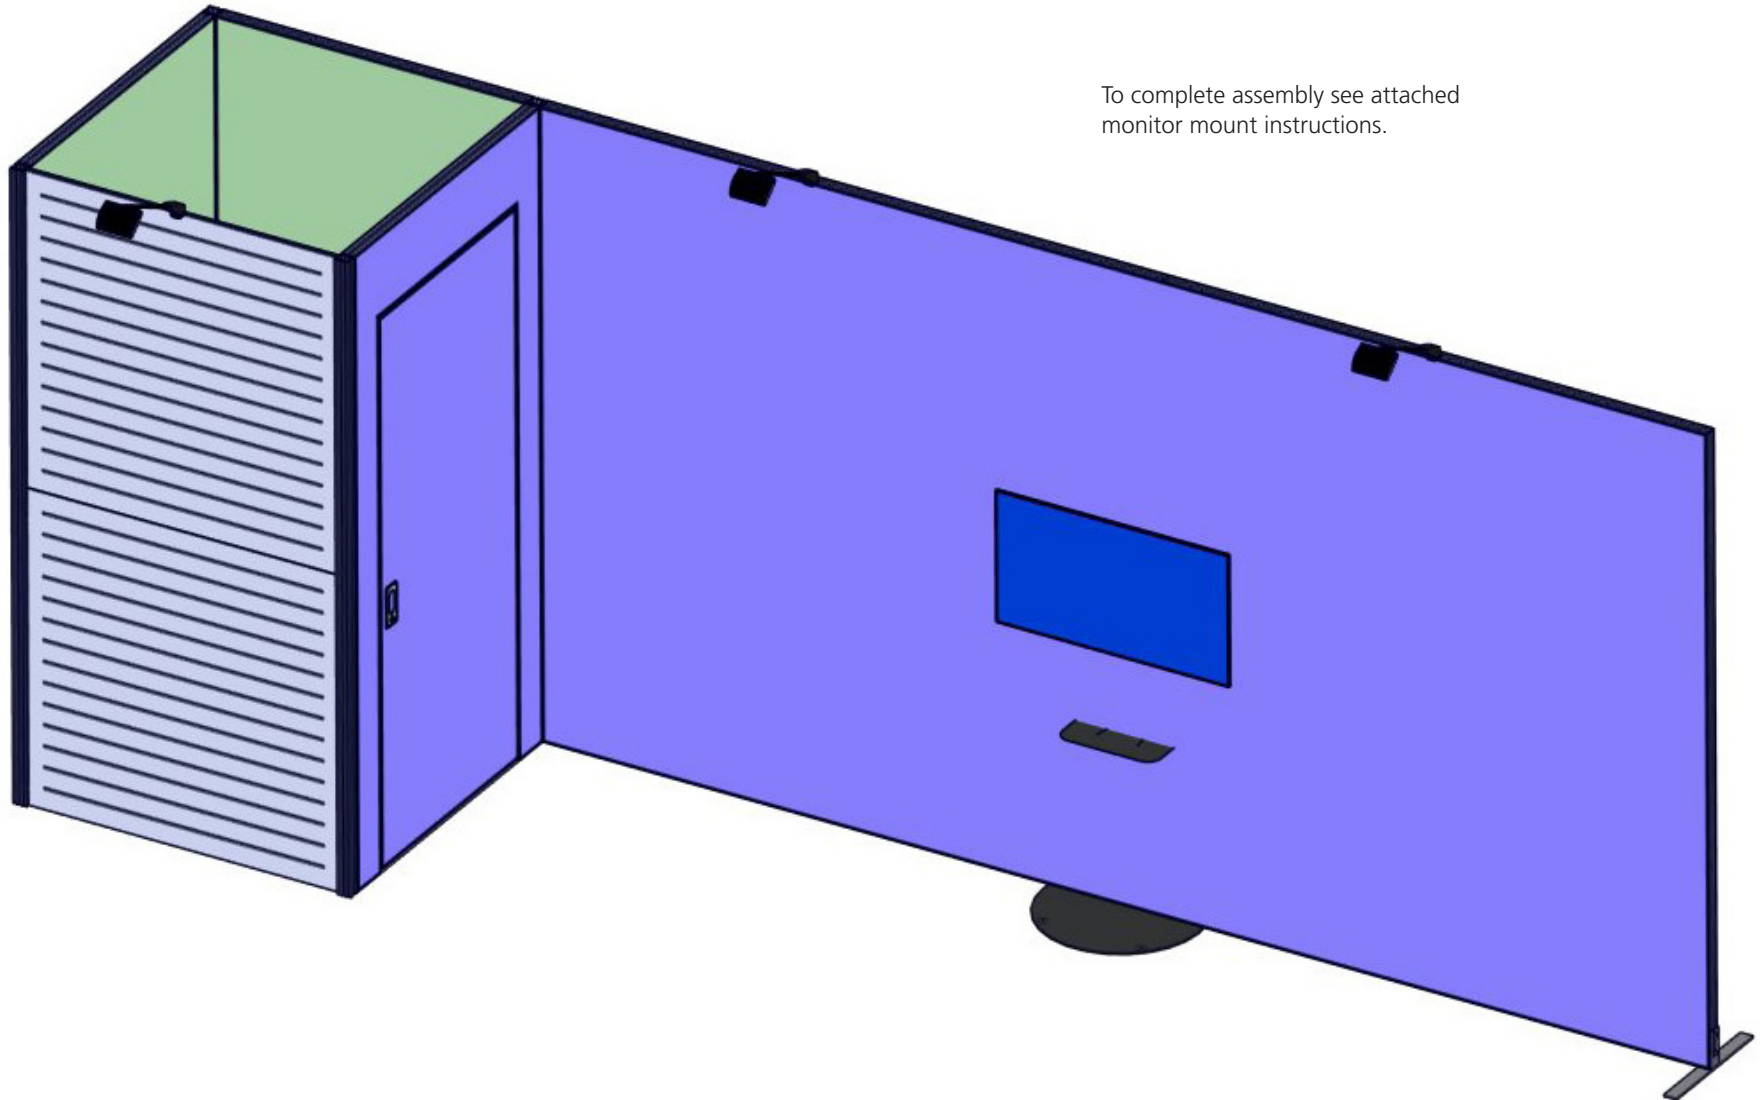
To complete assembly see attached monitor mount instructions.